CRT COLOR ANALYZER CA-100



The Minolta CRT Color Analyzer CA-100 is an advanced instrument designed to aid in the adjustment of the white balance of CRTs.

Measurements are taken simply by holding the measuring probe against the surface of the CRT; light emitted by the CRT phosphors and received by the measuring probe is measured continuously. Measured values can be displayed as x and y (chromaticity coordinates) and Y (luminance) values or as T (correlated color temperature), \triangle uv (color difference from blackbody locus), Y (luminance) values. Absolute measured values are displayed digitally; measured values are also displayed in analog form as a percentage of previously stored standard color data. Four different synchronization modes allow the CA-100 to measure virtually any CRT. These four modes are: NTSC (for measuring CRTs with a vertical scanning frequency of 60Hz, such as NTSC-system televisions), PAL (for measuring CRTs with a vertical scanning frequency of 50Hz, such as PAL- or SECAM-system televisions), EXT (for measurements utilizing an external synchronization signal), and UNIV. (for measuring CRTs with uncertain vertical scanning rates or for which a synchronization signal cannot be obtained). Eleven memory channels are provided for storing standard color data and calibration data for user-selected references. In addition, an RS-232C terminal is provided for data communication; measurement data can be output from the CA-100 to a separate computer and all functions of the CA-100 can be operated from the computer. Thus, the CA-100 can even function as part of a computerized production or quality-control system.

Optional accessories further expand the capabilities of the CA-100. Multi-Probe Expansion Board CA-A13 allows up to five measuring probes to be connected to the CA-100, enabling simultaneous measurements of multiple points on the CRT surface. GP-IB Interface Board CA-A20 can be installed for connecting the CA-100 to a GP-IB system, enabling the CA-100 to be used in a multi-device computer network. Memory Card CA-A14 and Multi-Probe Memory Card CA-A17 expand the memory of the CA-100 from 11 to 100 channels. Analyzer Card-G CA-A15 and Multi-Probe Analyzer Card-G CA-A18 add an analyzer (RBG) display mode based on G-beam standard to the CA-100 and also expand the memory to 100 channels. Analyzer Card-R CA-A19 add an analyzer (RBG) display mode based on R-beam standard and also expand the memory to 100 channels.

This manual explains the operation of the Minolta CRT Color Analyzer CA-100 itself and operation with its accessories. Please read and study this manual thoroughly before using the CRT Color Analyzer CA-100 and/or its accessories for the first time, and keep this manual handy for future reference.

WARNING

- Read all safety and operating instructions before setting up or operating the CA-100.
- This instrument should be used only under the specified ambient conditions. See p. 14.
- The input plug of the AC Power Cord should be connected only to a grounded wall socket.
- This instrument should be powered only by a power source of the indicated rating. See p. 14.
- For protection, this instrument is equipped with a fuse. If this fuse needs replacement, use a fuse of the same type and rating (0.5A/250V time-delay fuse for 100-120V model; T 0.315A/250V time-delay fuse for 200-240V model).
 Disconnect power input before replacing fuse.
- Do not disassemble this instrument or attempt to repair it yourself. This instrument consists of precise electronic components. Any necessary repairs should be performed only by an authorized Minolta service facility.

CONTENTS

£	DESCRIPTION	. 1
٧	VARNING	. 2
C	CONTENTS	. 3
	IAMES OF PARTS	
	Main Unit	. 5
	Measuring Probe CA-A10	. 5
	Standard Accessories	. 6
	Optional Accessories	
F	UNCTIONS OF KEYS AND SWITCHES	
	On Front Surface	
	Under Keyboard Cover	
	On Rear Surface	
11	NDICATIONS AND DISPLAYS	. 11
	Display Mode Indications	
	SYNC Mode Indications	
	Digital Display	
	Analog Display	
	Liquid Crystal Display	
	Over-/Under-Range Indications	13
N	OTES ON USE	. 14
	REPARATIONS	
•	Attaching Probe Holder CA-A11	
	Connecting the Measuring Probe	
	Connecting External Synchronization Signal	
*	Installing Optional Multi-Probe Expansion Board CA-A13	
*	CONNECTING MEASURING PROBES TO MULTI-PROBES EXPANSION BOARD	
*	Inserting Optional Cards	
	Power	
	CONNECTING AC POWER CORD	20
	SWITCHING POWER ON	20
	SWITCHING POWER OFF	21
	Selecting Luminance Unit	
	Selecting SYNC Mode	
	Selecting Display Mode	
k	Selecting Probe Connector Number	
7	ERO CALIBRATION	27
	UPPLEMENTARY OPERATIONS	
	Memory Channels	
	SELECTING MEMORY CHANNEL	
ķ	WHEN USING OPTIONAL ACCESSORIES	
	Setting/Changing Standard Color Data	
	SETTING/CHANGING PROCEDURE	
	By Measurement	
	By Inputting Numerical Values	
	Calibration to a User-Selected Reference	
	CALIBRATION PROCEDURE	
k	Setting RGB Emission Characteristics of CRT Phosphors	
ķ	SETTING PROCEDURE	
	Inputting ID Label	
	Setting Analog Display Range	
	FORMULAS	
	SETTING PROCEDURE	
	RELATION BETWEEN DIGITAL AND ANALOG DISPLAYS	. + 1
	Checking Stored Data	
	STANDARD COLOR DATA	. 42 10
	CALIBRATION DATA	
	MEASURING PROBE SERIAL NUMBER	
	Serial Number of Measuring Probes Used For Setting Data	
	Serial Number of Measuring Probes Osed For Setting Data Serial Number of Measuring Probe Presently Being Used	
	OUTAL MATERIAL OF MICAGAITINA FRANCE FRANCISCO DOMESTIC D	. 40

^{*}Procedures applicable only when using optional accessories


TAKING MEASUREMENTS	44
Display Hold	45
Displayed Data	45
DIGITAL DISPLAY	
ANALOG DISPLAY	ΔF
* WHEN USING AN OPTIONAL ANALYZER CARD	16
*ADJUSTING WHITE BALANCE USING ANALYZER (RBG) DISPLAY MODE	
* Procedure	
DATA COMMUNICATION	50
RS-232C Data Communication	50
CONNECTION WITH COMPUTER	50
COMMUNICATION PARAMETERS	51
Setting Baud Rate	51
COMMUNICATION PROCEDURE	
Inputting Commands	
Outputting Data	
Operation During Data Communication	
Sample Program	54
* GP-IB Data Communication	56
* INTERFACE METHOD	
* INSTALLING OPTIONAL GP-IB INTERFACE BOARD CA-A20	58
* NOTES ON CONNECTING CA-100 TO GP-IB SYSTEM	
* NOTES ON USING GP-IB SYSTEM	
* SETTING ADDRESS	
* COMMUNICATION PROCEDURE	60 60
* Inputting Commands	
* Service Request	
* Outputting Data	
* Operation During Data Communication	
* Sample Program	
Communication Format	
COMMANDS	
OUTPUT DATA	
Measurement Data	
Data Recalled From Memory	
Status Information	
Error Messages	
MEASURING PRINCIPLE	
General Information	
xyY Display Mode	
T∆uvY Display Mode	
Calibration to a User-Selected Reference	
* Analyzer Mode	
CARE AND STORAGE	86
FUSE REPLACEMENT	87
RACK INSTALLATION	87
DIMENSIONS	88
Main Body	88
Measuring Probe	
ERROR MESSAGES	
Determining Cause of Error Message "E1"	
TROUBLESHOOTING GUIDE	
* When Using Optional Multi-Probe Expansion Board	
* When Using an Optional Memory Card or Analyzer Card	
When Using Optional GP-IB Interface Board CA-A20	
SPECIFICATIONS	
	100


^{*}Procedures applicable only when using optional accessories

NAMES OF PARTS


Main Unit

FRONT SURFACE

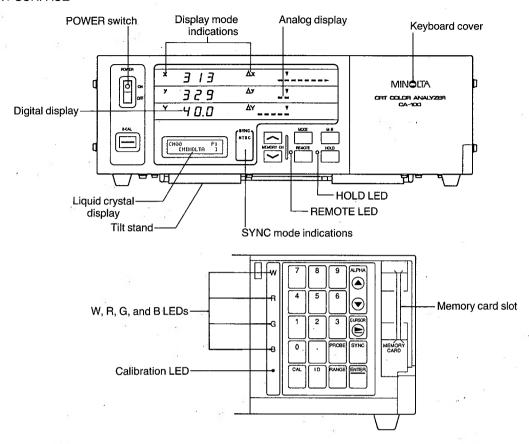


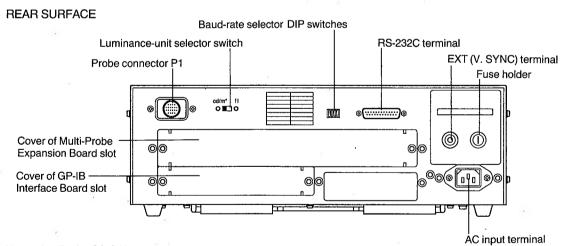


Measuring Probe CA-A10

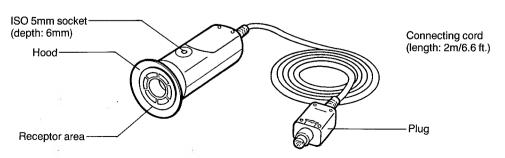

Standard Accessories

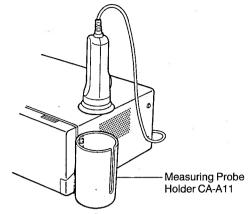

• Measuring Probe Holder CA-A11

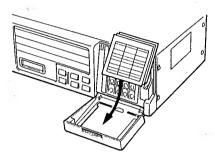

• Basic operation sheets (5 sheets; can be stored on inside of keyboard cover)



 AC Power Cord (Plug style may vary depending on country of purchase)




 Time-delay fuse (0.5A/250V for 100-120V model; T0.315A/250V for 200-240V model)

• Cleaning Cloth CA-A12

Optional Accessories

Note: This manual includes procedures for using these optional accessories as well as procedures for using the unit with only standard accessories. Procedures which apply only to use with optional accessories will be enclosed in a box.


- Measuring Probe CA-A10 (cord length: 2m/6.6 ft.)
- Measuring Probe CA-A12 (cord length: 5m/16.4 ft.)



These measuring probes can be connected to the probe connector of the main unit or any of the probe connectors of the optional Multi-Probe Expansion Board CA-A13.

• Multi-Probe Expansion Board CA-A13

This board allows the use of four additional measuring probes (for a total of five) for simultaneous measurement of multiple points.

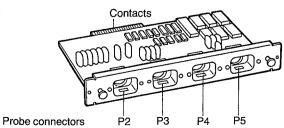

• Cards

Six different cards are available for the CA-100. Each card can be inserted into the memory card slot for use.



- In this manual:


"Memory Card" refers to Memory Card CA-A14 or Multi-Probe Memory Card CA-A17.

"Analyzer Card" refers to Analyzer Card-G CA-A15, Analyzer Card-R CA-A16, Multi-Probe Analyzer Card-G CA-A18, or Multi-Probe Analyzer Card-R CA-A19.

Card name	Function		
Memory Card CA-A14	Provides 89 additional memory channels.		
Analyzer Card-G CA-A15	Provides analyzer function (green standard) and 89 additional memory channels.		
Analyzer Card-R CA-A16	Provides analyzer function (red standard) and 89 additional memory channels.		
Multi-Probe Memory Card CA-A17	Provides 89 additional memory channels; for use with Multi-Probe Expansion Board.		
Multi-Probe Analyzer Card-G CA-A18	Provides analyzer function (green standard) and 89 additional memory channels; for use with Multi-Probe Expansion Board.		
Multi-Probe Analyzer Card-R CA-A19	Provides analyzer function (red standard) and 89 additional memory channels; for use with Multi-Probe Expansion Board.		


• GP-IB Interface Board CA-A20

Allows CA-100 to be connected to and used with the IEEE-488 GP-IB (general-purpose interface bus) for data communication and computer control.

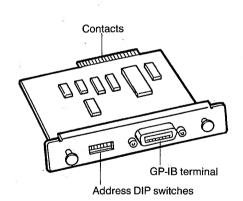

FUNCTIONS OF KEYS AND SWITCHES

On Front Surface

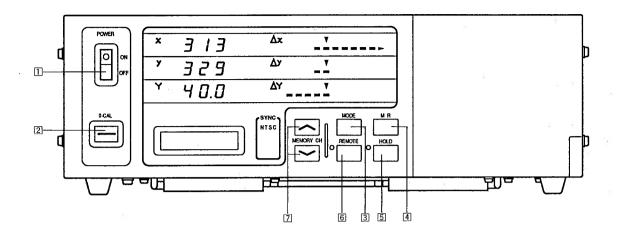

POWER switch
 ■
 POWER switch

Switches power on and off.

2 0-CAL

Performs zero calibration.

3 MODE

Selects display mode. Display mode changes in the following order:

xvY → T∆uvY → [analyzer (RBG)* →] xyY → ···

*Analyzer (RBG) available only with optional Analyzer Card.

4 M R

Recalls previously set standard color data to the liquid crystal display.

If held pressed when PROBE is pressed in xyY or T\(\triangle\) uvY display mode, displays serial number of the probe in use at the time calibration to a user-selected reference was performed and standard color data were set.

If held pressed when PROBE is pressed while optional Analyzer Card is being used with analyzer (RBG) display mode selected, displays serial number of the probe in use at the time RGB emission characteristics of CRT phosphors and standard color (W)

6 HOLD

Holds presently displayed data in display (HOLD LED will light) if pressed once; cancels display hold (LED will become not lit) if pressed again.

• If ENTER is pressed while display hold is set, data held in display will be set as standard color data.

6 REMOTE


Sets CA-100 for remote control via RS-232C terminal (REMOTE LED will light) if pressed once; cancels remote-control mode (LED will become not lit) if pressed again.

• Once remote-control mode has been set, pressing any key except REMOTE will have no effect on CA-100 operation.

☑ MEMORY CH 🖂 and 🖂 Selects memory channel (00 through 10 standard; 00 through 99 with optional Memory Card or Analyzer Card).

- selects memory channel in increasing numerical order; resets to memory channel 00 if pressed while highest memory channel (10 or 99) is displayed.
- selects memory channel in decreasing numerical order; resets to highest memory channel (10 or 99) if pressed while memory channel 00 displayed.

Under Keyboard Cover

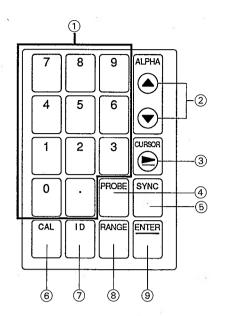

① Number keys (0 through 9 and .) Inputs numbers or decimal point for calibration data of user-selected reference, standard color data, value of analog display range, or ID label.

② ALPHA ▲ ALPHA ▼

Selects letters, hyphen, or space for inputting ID label. Selected letter changes by one each time either key is pressed; selected letter changes rapidly if key held pressed.

ALPHA ▲ selects letters in alphabetical order; selects hyphen ("-") and then a blank space (" ") after "Z"; selects "A" after blank space.

ALPHA ▼ selects letters in reverse alphabetical order; selects a blank space (" ") and then a hyphen ("-") after "A"; selects "Z" after hyphen.

③ CURSOR ▶

Selects position when inputting calibration data of user-selected reference, standard color data, value of analog display range, or ID label. Moves cursor to next character space when pressed once; moves cursor continuously when held pressed.

If held pressed when **ENTER** is pressed, sets presently selected memory channel, display mode, SYNC mode, and probe connector number as the default settings (the settings which will be automatically selected when POWER switch is first set to **ON**).

(4) PROBE

Displays serial number of probe in use.

If pressed while optional Multi-Probe Expansion Board CA-A13 is being used, selects probe connector number.

If pressed while **M R** is held pressed in xyY or T△uvY display mode, displays serial number of the probe in use at the time calibration to a user-selected reference was performed and standard color data was set.

If pressed while **M R** is held pressed and optional Analyzer Card is being used with analyzer (RBG) display mode selected, displays serial number of the probe in use at the time RGB emission characteristics of CRT phosphors and data of standard color (W) were set.

5 SYNC

Selects SYNC (measurement synchronization) mode; mode changes in the following order: $NTSC \rightarrow PAL \rightarrow EXT \rightarrow UNIV. \rightarrow NTSC \rightarrow \cdots$

(6) CAL

If pressed while memory channel 00 is selected, sets CA-100 for numerical input of standard color data.

If pressed while memory channel other than 00 is selected, sets CA-100 for numerical input of calibration value of user-selected reference.

If pressed while optional Analyzer Card is being used and analyzer (RBG) display mode is selected, sets CA-100 for input of RGB emission characteristics of CRT phosphors.

(7) **ID**

Sets CA-100 for input of identification (ID) label for memory channel.

(8) RANGE

Sets CA-100 for changing value of analog display range.

9 ENTER

Stores input data (calibration data of user-selected reference, standard color data, value of analog display range, or ID label) in memory.

If pressed while display hold is set, sets data held in display as standard color data.

If pressed while **CURSOR** ▶ is held pressed, sets presently selected memory channel, display mode, SYNC mode, and probe connector number as the default settings (the settings which will be automatically selected when POWER switch is first set to **ON**).


On Rear Surface

1. Luminance-unit selector switch


Selects luminance unit: cd/m² or fL.

2. Baud-rate selector DIP switches

Selects baud rate for data communication via RS-232C terminal.

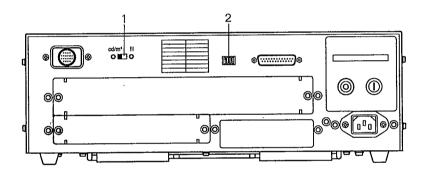

INDICATIONS AND DISPLAYS

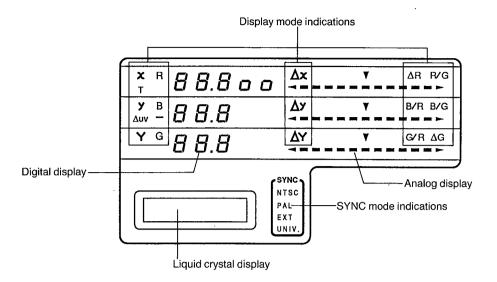

 All possible indications are shown in the figure above. During operation, only the appropriate indications will be shown.

Display Mode Indications

The selected display mode is indicated by the letters appearing next to the measurement data in the digital and analog displays.

	Indications		
Display mode	Digital	Analog	
xyY	"x", "y", "Y"	"Δx", "Δy", "ΔY"	
T∆uvY	"T", "∆uv", "Y"	"Δ x ", "Δ y ", "Δ Y "	
Analyzer (RBG)*	"R", "B", "G",	"R/G", "B/G", "△G" for green standard	
	"R", "B", "G",	"△R", "B/R", "G/R" for red standard	

^{*}Analyzer (RBG) display mode available only with optional Analyzer Card.

SYNC Mode Indications

The selected SYNC (measurement synchronization) mode is indicated by the lit mode indication: "NTSC", "PAL", "EXT", or "UNIV."

Digital Display

Numerical measurement values are shown in the digital display according to the display mode selected.

In xyY display mode, values for x and y (chromaticity coordinates) and Y (luminance) are displayed. The displayed values for x and y are 1000 times the actual value.

	- , -	
	3 1 Z	
У	280	
Y	84.1	

In $T\triangle uvY$ display mode, values for T (correlated color temperature), $\triangle uv$ (color difference from blackbody locus) and Y (luminance) are displayed. The displayed value of the correlated color temperature has three significant figures; the fourth and fifth figures are always zero. The displayed value of $\triangle uv$ is 1000 times the actual value.

Т	7050	
Δuv	024	
Y	84.1	

In analyzer (RBG)* display mode, values for measured R, B, and G (red, blue, and green intensities) as a percentage of the R, B, and G intensities of the standard color are displayed. If the values are 1000% or greater, a multiplication factor ("X10" or "X100") will be shown in the liquid crystal display.


R	9 5.2	
В	8 8.8	*
G	9 0.5	

*Analyzer (RBG) display mode is available only with optional Analyzer Card.


Analog Display

The percent differences between the measured data and the standard color data or between two values of measured data are indicated by the analog display according to the selected display mode as shown below.

In xyY or $T\triangle uvY$ display mode, values for $\triangle x$, $\triangle y$, and $\triangle Y$ are displayed.




In analyzer (RBG)* display mode when using optional Analyzer Card-G CA-A15 or Multi-Probe Analyzer Card-G CA-A18, values for R/G, B/G, and \triangle G will be displayed.

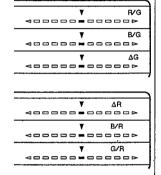

In analyzer (RBG)* display mode when using optional Analyzer Card-R CA-A16 or Multi-Probe Analyzer Card-R CA-A19, values for $\triangle R$, B/R, and G/R will be displayed.

*Analyzer (RBG) display mode is available only with optional Analyzer Card.


The value of the analog display range is the value for the central dot. For an analog display range value of n, the LEDs of the analog display indicate the values shown below.

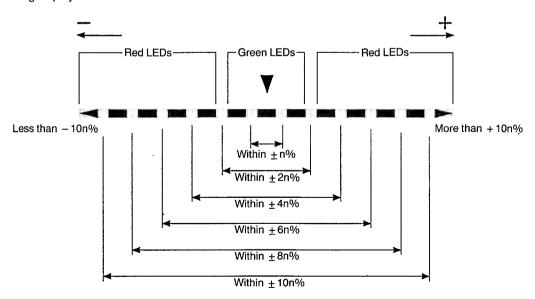

The value of the analog display range is set to 10 at the time of shipment. It can be set between 0.1% and 99% according to the procedure on p. 39.

Liquid Crystal Display

The liquid crystal display shows a variety of information, such as present memory channel, present probe connector number, ID label, error messages, set or stored values, and multiplication factor, depending on the present operating state.



Over-/Under-Range Indications

Indication		Meaning	
Digital display: ""			
Analog display:	No display	Over measurement range	
Liquid crystal display:	"OVER"		
Digital display:	Blinking	Y (luminance) is less than 0.19cd/m² or 0.06 fL when taking measurements based on Minolta's calibration standard	
Digital display (T or ∆uv area):	""	T or ∆uv beyond display range	

NOTES ON USE

The CA-100 has been tested and found to withstand the following conditions. It should be used only in areas which
do not exceed these conditions.

Operating temperature range	0 to 40 °C/32 to 104°F		
Storage temperature range	-20 to 55°C/-4 to 131°F (For optional cards: -10 to 55°C/14 to 131°F)		
Humidity	Less than 85% at 35°C/95°F with no condensation		
Impact resistance	10G (X, Y, and Z; 3 times in each direction)		
Vibration resistance	2G (X, Y, and Z; 30 minutes at 16.7Hz in each direction)		
Dielectric withstand voltage	1.0kV for 100-120V model; 1.5kV for 200-240V model		
Insulation resistance	10ΜΩ		
Static electricity	Main unit: 5kV Measuring probe: 15kV		
Line noise	1.0kV		
Leakage current	Less than 0.5mA		
Service interruption	20ms		
Voltage range	90 to 132V AC for 100-120V model; 180 to 264V AC for 200-240V model		


- Do not use or leave this instrument in direct sunlight or near sources of heat, such as stoves, strong lights, etc. Using
 or leaving this instrument in such locations may cause damage to internal components, since the internal temperature of the instrument may become much higher than the ambient temperature. Also, do not cover the ventilation
 holes of this instrument or use this instrument in poorly ventilated areas.
- Do not use this instrument in areas subject to quick variations in temperature. Use in such areas will not yield accurate results.
- · Do not use this instrument in extremely dusty or extremely humid areas.
- Be extremely careful to keep water or metallic objects from entering this instrument. If water or a metallic object does enter this instrument, do not use this instrument until the water or metallic object has been removed.
- To avoid damaging the probe connecting cord or AC power cord, do not pull on, sharply bend, or apply strong force to either cord. When disconnecting either cord, pull on the plug, not the cord.
- This instrument should be used with a power source which is free of electrical noise.
- If this instrument is installed in a rack, be sure that the rack is strong enough to support this instrument and that there is sufficient ventilation.
- If a malfunction occurs, switch off the power immediately, unplug the AC power cord, and check for possible causes for the problem according to the troubleshooting guide on p. 95.

PREPARATIONS


Attaching Measuring Probe Holder CA-A11

Measuring Probe Holder CA-A11 should be attached to the CA-100 as shown below.

• The measuring probe holder can be attached to either side of the CA-100.

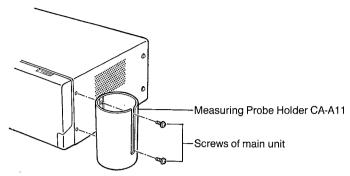


Once the measuring probe holder has been attached, the measuring probe can be stored in the measuring probe holder as shown below.

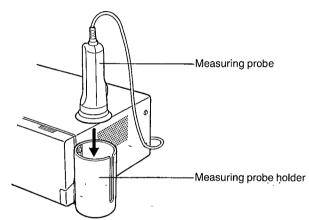

Connecting the Measuring Probe

Before switching on the power, connect the measuring probe according to the following procedure.

- 1. Check that the POWER switch is set to OFF.
- 2. With the probe serial number facing down, insert the plug of the probe connecting cord into probe connector P1 until it cannot be inserted any further.

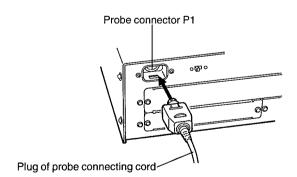


• When disconnecting the measuring probe, set the POWER switch to **OFF** and pull the plug straight out of the probe connector. Do not pull on the connecting cord.

Connecting External Synchronization Signal


• When SYNC mode is set to NTSC, PAL, or UNIV., it is not necessary to input an external synchronization signal.

An external synchronization signal is necessary for measurements when the SYNC mode is set to EXT. By inputting the synchronization signal (40 to 90Hz) of the CRT to be measured into the CA-100, measurements can be performed in synchronization with the scanning of the CRT.

- 1. Check that both the CA-100 and the synchronization signal source are switched off.
- 2. Using a cable equipped with a BNC connector, connect the output of the sychronization signal source to the EXT (V. SYNC) terminal on the back of the CA-100 as shown below.

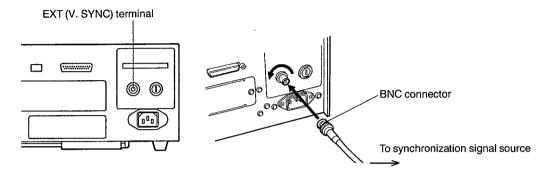

CIRCUIT DIAGRAM

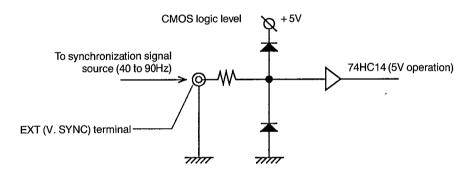


• SYNC terminal shall be treated as Class III in accordance with IEC 1010-1 Annex H.


Installing Optional Multi-Probe Expansion Board CA-A13

By using the optional Multi-Probe Expansion Board CA-A13, it is possible to use up to five measuring probes for simultaneous measurements of five points on the CRT.


- Do not touch the gold contacts or any of the components on the Multi-Probe Expansion Board. If the contacts become dirty, wipe them with a soft dry cloth.
- 1. Set POWER switch to OFF.
- 2. Using a Phillips (cross-point) screwdriver, remove the two screws of the cover of the expansion-board slot by turning them counterclockwise, and then remove the cover.




3. Align the edges of the Multi-Probe Expansion Board with the grooves in the guide rails on each side of the Multi-Probe Expansion Board slot and slide the Multi-Probe Expansion Board fully into the slot in a straight line. Check that the board is firmly in place.

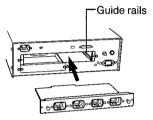

4. Insert one screw in the hole on each side of the Multi-Probe Expansion Board and tighten until snug.




 To remove the Multi-Probe Expansion Board, switch off the power and unplug the AC power cord, remove the two screws holding the Multi-Probe Expansion Board in place, grasp the handpulls of the Multi-Probe Expansion Board, and pull the board out of the slot in a straight line. After removing the Multi-Probe Expansion Board, be sure to replace the cover of the Multi-Probe Expansion Board slot.



CONNECTING MEASURING PROBES TO MULTI-PROBE EXPANSION BOARD

Two types of measuring probes are available as optional accessories and can be connected to the Multi-Probe Expansion Board. Measuring Probe CA-A10 has a connecting-cord length of 2m/6.6 ft.; Measuring Probe CA-A12 has a connecting-cord length of 5m/16.4 ft.

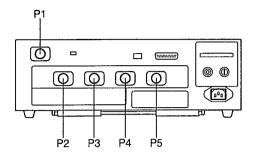

When using the Multi-Probe Expansion Board, it is necessary to have a probe connected to probe connector P1. Other probe connectors can be used in whatever order desired. It is not necessary to use other probe connectors in numerical order.

Probes should be connected to the Multi-Probe Expansion Board according to the procedure below.

- 1. Check that the POWER switch is set to OFF.
- 2. With the probe serial number facing down, insert the plug of the probe connecting cord into the probe connector until it cannot be inserted any further.
- When disconnecting the measuring probe, set the POWER switch to **OFF** and pull the plug straight out of the probe connector. Do not pull on the connecting cord.
- Be sure to cover any unused probe connectors with the caps included.

Inserting Optional Cards


The six different optional cards available for the CA-100 are:

Card name	Function
Memory Card CA-A14*	Provides 89 additional memory channels.
Analyzer Card-G CA-A15*	Provides analyzer function (green standard) and 89 additional memory channels.
Analyzer Card-R CA-A16*	Provides analyzer function (red standard) and 89 additional memory channels.
Multi-Probe Memory Card CA-A17	Provides 89 additional memory channels; for use with Multi-Probe Expansion Board.
Multi-Probe Analyzer Card-G CA-A18	Provides analyzer function (green standard) and 89 additional memory channels; for use with Multi-Probe Expansion Board.
Multi-Probe Analyzer Card-R CA-A19	Provides analyzer function (red standard) and 89 additional memory channels; for use with Multi-Probe Expansion Board.

* Memory Card CA-A14, Analyzer Card-G CA-A15, and Analyzer Card-R CA-A16 cannot be used with more than one probe. Thus, if optional Multi-Probe Expansion Board CA-A13 has been installed and a probe is connected to any of the board's probe connectors (P2 through P5), these cards cannot be used. However, if no probe is connected to the board's probe connectors, these cards can be used even if the Multi-Probe Expansion Board has been installed.

To insert any of these cards, follow the steps below.

- 1. Set POWER switch to OFF.
- 2. With the card positioned as shown in the diagram at right, insert the card fully into the memory card slot until it cannot be inserted any further.

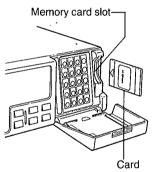


- Never insert or remove a card while the CA-100 is switched on.
- Check the position of the card carefully before inserting. The card can be inserted in only one position. Do not try to force the card into the slot. If it is difficult to insert the card, check again that the card is positioned correctly.
- Do not drop or bend the card or subject it to strong shock or force.
- Be extremely careful to prevent anything, such as dust, moisture, oil, etc. from entering the connector of the card. If anything enters the connector of the card, faulty connection and/or malfunction may occur.
- Do not use or store the card in areas subject to static electricity or excessive electrical noise. Use or storage in such areas may result in data loss.
- Do not use memory cards other than those sold by Minolta as optional accessories for the CA-100.

Power

CONNECTING AC POWER CORD

This instrument should be used only with the rated power supply: AC 100 to 120V, 50/60Hz for North America; AC 200 to 240V, 50/60Hz for Europe.

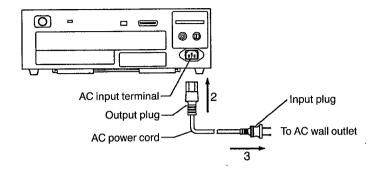


- 1. Check that the POWER switch is set to OFF.
- 2. Insert the output plug of the AC power cord into the AC input terminal of the CA-100. The output plug can be inserted in only the position shown in the diagram.
- 3. Insert the input plug of the AC power cord into the appropriate AC wall outlet.
- When disconnecting the AC power cord, set the POWER switch to **OFF** and pull the output plug straight out of the AC input terminal. Do not pull on the cord.

SWITCHING POWER ON

Before switching power on, check that the measuring probe is connected to probe connector P1. Also check the following points if applicable.

- If an external synchronization signal will be used, also check that the synchronization signal source is connected to the CA-100's EXT (V. SYNC) terminal (see p. 16).
- If multiple measuring probes will be used, also check that the optional Multi-Probe Expansion Board CA-A13 is installed and that the desired measuring probes are connected (see p. 17).
- If any of the optional cards will be used, check that the card is inserted (see p. 19).
- If data communication via the RS-232C terminal will be performed, check that the separate computer is connected to the RS-232C terminal (see p. 50) and that the baud-rate selector DIP switches are set correctly (see p. 51).
- If data communication via the optional GP-IB Interface Board CA-A20 will be performed, check that the GP-IB Interface Board is installed (see p. 58), that the separate computer is connected to the GP-IB Interface Board (see p. 59), and that the board's address selector DIP switches are set correctly (see p. 59).

After checking the above points, check that the AC power cord is Probe serial number connected to the CA-100's AC input terminal and to an AC wall outlet, and then set the POWER switch to **ON**. The sequence of displays shown at right will appear in the liquid crystal display.

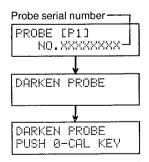

• If an external device is connected to the CA-100, set the POWER switch of the CA-100 to **ON** and then switch on the external device.

Default Settings

When the CA-100's POWER switch is first set to **ON**, the following settings will be automatically set.

Display mode	xyY
SYNC mode	EXT
Probe connector number	P1
Memory channel	00
Calibration data for user-selected reference	Minolta's standard calibration data
Standard color data	x = 0.313, y = 0.329, Y = 40.0cd/m ²
ID label	Blank spaces
Analog display range value	10

The default settings of display mode, SYNC mode, probe connector number, and memory channel can be changed by the user if desired according to the following procedure.

- 1. Select the desired settings:
 - a. Use MODE to select the desired display mode.
 - b. Use SYNC to select the desired SYNC mode.
 - c. Use **PROBE** to select the desired probe connector number.
 - d. Use **MEMORY CH** △ or ☑ to select the desired memory channel.
- 2. While pressing CURSOR ▶, press ENTER to store the settings selected in step 1 as the default settings.

If calibration data for user-selected reference, standard color data, ID label, and/or analog display range value are changed by the user, the new data will remain in memory until changed again, even if the POWER switch is set to **OFF**.

• If remote is pressed, the CA-100 will be set to remote-control mode (REMOTE LED will become lit). In remote-control mode, the CA-100 will not respond to any key except **REMOTE**.


SWITCHING POWER OFF

When an external device has been connected to the CA-100, switch off the external device before setting the CA-100's POWER switch to **OFF**.

Selecting Luminance Unit

The CA-100 can measure luminance in terms of cd/m^2 or fL. At the time of shipment, the luminance unit is set as cd/m^2 .


To select the desired luminance unit, set the luminance-unit selector switch on the back of the CA-100 to the position corresponding to the desired luminance unit.

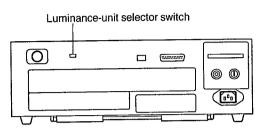

Selecting SYNC mode


The CA-100 is equipped with four different SYNC (measurement synchronization) modes to allow measurements of a wide variety of CRTs with different vertical scanning frequencies. The four SYNC modes are:

SYNC mode	Purpose	Measurement time (sampling rate)	Vertical scanning frequency	Input of CRT vertical synchronization signal to CA-100
NTSC	For measurements of NTSC- system televisions	33.3ms	60Hz	Not necessary
PAL	For measurements of PAL- or SECAM-system televisions	40.0ms	50Hz	Not necessary
EXT	For measurements utilizing an external synchronization signal.	Two times vertical scanning period	40 to 90Hz	Necessary
UNIV.	For measurements of CRTs for which vertical scanning rate is uncertain and from which synchronization signal cannot be obtained.	100ms		Not necessary

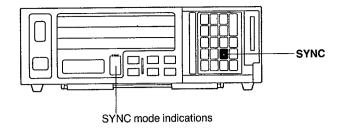

To select the SYNC mode for the CRT to be measured, follow the steps below.

- 1. Check that POWER switch is set to ON.
- 2. Press SYNC repeatedly to select the desired SYNC mode. The selected SYNC mode will change in the following order:

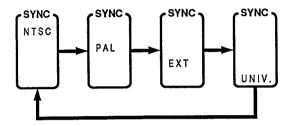

- If SYNC mode is set to EXT, an external synchronization signal must be input via the EXT (V. SYNC) terminal on the back of the CA-100.
- EXT is set as the default setting at the time of shipment.

The SYNC mode selected is one of the factors involved in determining the rate at which calculations and updating of displayed and output data can be performed. Other factors involved include:

- Luminance of the CRT being measured
- · Display mode
- Baud rate (when outputting data via RS-232C terminal)
- Number of measuring probes being used (when using optional Multi-Probe Expansion Board CA-A13)

When measurements of a CRT having the maximum luminance of the Minolta standard are performed with the baud rate set to 9600 bps using one measuring probe, the rate for calculations and updating of displayed and output data is as follows:

Display mode SYNC mode	хуҮ	T∆uvY
NTSC	10 times/s	8 times/s
PAL	8 times/s	7 times/s
EXT*	7 times/s	7 times/s
UNIV.	5 times/s	4 times/s

^{*}With external synchronization signal frequency of 60Hz.

Selecting Display Mode

The CA-100 is equipped with two standard display modes and an analyzer display mode which can be added with an optional Analyzer Card.


Display mode	Displayed/output values
xyY	Digital display shows chromaticity coordinates x and y, and luminance Y. Analog display shows Δx , Δy , and ΔY .
T∆uvY	Digital display shows correlated color temperature T, difference from blackbody locus $\triangle uv$, and luminance Y. Analog display shows $\triangle x$, $\triangle y$, and $\triangle Y$.
Analyzer (RBG)*	For green standard (available with optional Analyzer Card-G CA-A15 or Multi-Probe Analyzer Card-G CA-A18): Digital display shows measured RGB intensities as a percentage of the RGB intensities of the standard color (W). Analog display shows measured ratios R/G and B/G, and △G (difference between G intensity of standard color and measured G intensity).
	For red standard (available with optional Analyzer Card-R CA-A16 or Multi-Probe Analyzer Card-R CA-A19): Digital display shows measured RGB intensities as a percentage of the RGB intensities of the standard color (W). Analog display shows △R (difference between R intensity of standard color and measured R intensity) and measured ratios B/R and G/R.


^{*}Analyzer (RBG) display mode is available only with Analyzer Card.

To select the desired display mode, follow the steps below.

- 1. Check that POWER switch is set to ON.
- 2. Press **MODE** repeatedly to select the desired display mode.

 If optional Analyzer Card is not used, the selected display mode will change in the following order:

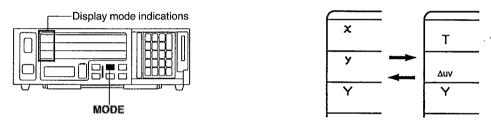

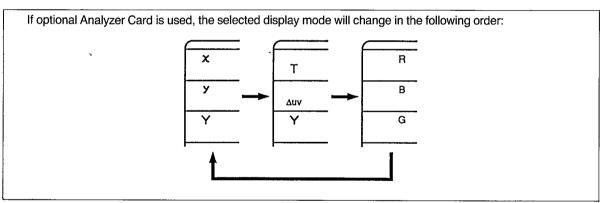

• xyY is set as the default setting at the time of shipment.


Selecting Probe Connector Number

When the optional Multi-Probe Expansion Board CA-A13 is installed, up to five measuring probes can be connected to the CA-100. When more than one probe is connected, data measured by a probe can be displayed by selecting the number of the probe connector to which the probe is connected. The desired probe connector number can be selected by following the steps below.

- 1. Check that POWER switch is set to ON.
- 2. Press **PROBE** repeatedly to select the desired probe connector number. The selected probe connector number will change in the following order:




- Probe connector number P1 is set as the default setting at the time of shipment.
- If no probe is connected to a probe connector, that probe connector number cannot be selected. For example, if no probe is connected to probe connector number P4, the selected probe connector number would change from P3 to P5 if PROBE was pressed while the selected probe connector number was P3.
- The serial number of the probe connected to the selected probe connector will be shown in the liquid crystal display (as shown at right) while PROBE is held pressed. The data shown in the digital and analog displays will be the data measured by the probe connected to the selected probe connector. When PROBE is released, the liquid crystal display will return to the normal display showing selected memory channel, selected probe connector number, and ID label.




ZERO CALIBRATION

Zero calibration must be performed before any measurements can be taken after the POWER switch has been set to **ON**. Zero calibration determines the output of the measuring probe's receptor when no light is incident on the receptor, providing a reference point for measurements. To perform zero calibration, follow the steps below.

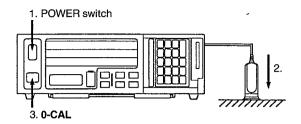

- 1. Check that POWER switch is set to ON.
- 2. Place receptor area of measuring probe face down on a flat surface so that no light reaches the receptor area.
- If optional Multi-Probe Expansion Board CA-A13 has been installed and more than one probe is connected to the CA-100, place receptor areas of all probes face down on a flat surface so that no light reaches the receptor area of any probe. If light reaches the receptor area of even one probe, zero calibration will not be correct.
- 3. After "PUSH 0-CAL KEY" appears in the liquid crystal display, press **0-CAL**. "ZERO CALIBRATION" will appear in the liquid crystal display while zero calibration is being performed, and then the liquid crystal display will return to the normal display showing selected memory channel, selected probe connector number, and ID label. Measurements will then start immediately.



- "E1" will appear in the liquid crystal display the first time the CA-100 is used after shipment because no standard color has been set.
- Zero calibration can be performed at any time, even if "PUSH 0-CAL KEY" is not shown in the liquid crystal display.

Note:

- If the luminance of the CRT to be measured is 1.00cd/m² (0.29 fL) or less, wait at least five minutes after setting POWER switch to **ON** before performing zero calibration. Also, when measuring CRTs of low luminance, zero calibration should be performed approximately once an hour to ensure accuracy.
- If the ambient temperature changes after zero calibration has been performed, perform zero calibration again.
- Do not press any key while zero calibration is being performed. If a key is pressed, the time required for zero calibration will become longer.

To check if zero calibration was performed correctly, place the receptor area of the probe face down on a flat surface so that no light reaches the receptor area.

If the display shown at right appears in the liquid crystal display, perform zero calibration again.

OFFSET ERROR PUSH Ø-CAL KEY

• Even when "OFFSET ERROR" appears in the liquid crystal display, if light reaches the receptor area of the measuring probe, measured values will appear in the digital and analog displays. However, these values will not be accurate.

If any other display is shown, zero calibration was performed correctly.

SUPPLEMENTARY OPERATIONS

Although it is possible to start taking measurements based on Minolta's standard calibration data immediately after performing zero calibration without performing any additional operations, to take full advantage of the capabilities of the CA-100, supplementary operations should be performed according to the specific purpose for which the CA-100 will be used. Supplementary operations include:

a. Setting/changing standard color data (p. 30)

Standard color data is necessary for using the analog displays. The standard color data which is set for one memory channel will be used for all measurements with that memory channel, regardless of the display mode selected.

- When taking measurements based on Minolta's calibration standard, if standard color data is desired it must be set separately.
- When calibration to a user-selected reference is performed, standard color data is automatically set to the calibration data for the user-selected reference. If desired, the standard color data can then be changed.
- When RGB emission characteristics for CRT phosphors are set, the standard color data is automatically set to the data for W. If desired, the standard color data can then be changed.

If calibration to a user-selected reference is performed or RGB emission characteristics of CRT phosphors are set, standard color data should be set after either of these operations has been performed.

b. Calibration to a user-selected reference (p. 33)

Calibration to a user-selected reference can be performed to:

• Adjust for slight variations between the spectral response of the measuring probe and the CIE 1931 colormatching functions;

Standardize the response of several CA-100 units; or

• Standardize the response of several measuring probes (when using optional Multi-Probe Expansion Board CA-A13)

If calibration to a user-selected reference is desired, it should be performed before setting standard color (if performed).

- Standard color data is automatically set to the calibration data for user-selected reference when calibration to a user-selected reference is performed.
- Setting RGB emission characteristics of CRT phosphors (p. 36)

(Possible only when using an optional Analyzer Card)

By setting the RGB emission characteristics of CRT phosphors, it is possible to directly measure and display the RGB (red, green, blue) beam intensities of the CRT being measured. Adjusting CRT white balance based on RGB beam intensities is much easier than adjustment based on xyY values.

- Standard color data is automatically set to the data for W when RGB emission characteristics of CRT phosphors are set.
- d. Inputting ID label (p. 38)

An ID label can be input for each memory channel to identify different sets of stored calibration data or standard color data.

e. Setting analog display range (p. 39)

The analog display range can be set according to the acceptable adjustment accuracy.

Memory Channels


The CA-100 is equipped with 11 memory channels numbered from 00 through 10. In each channel, the following four types of information can be stored.


- 1. Calibration data for a user-selected reference*
- 2. RGB emission characteristics of CRT phosphors (possible only when using optional Analyzer Card)
- 3. Standard color data
- 4. ID label

*Calibration data for a user-selected reference cannot be stored in memory channel 00, since memory channel 00 contains the calibration data for Minolta's standard. However, standard color data, ID label, and RGB emission characteristics for CRT phosphor (when using optional Analyzer Card) can still be stored.

SELECTING MEMORY CHANNEL

The desired memory channel can be selected by pressing **MEMORY CH** \triangle or \square repeatedly. The selected memory channel is shown in the upper left of the liquid crystal display.





WHEN USING OPTIONAL ACCESSORIES

Cards

When using an optional Memory Card or Analyzer Card, the number of memory channels available is increased from 11 to 100 (numbered 00 through 99).

Multi-Probe Expansion Board CA-A13

When optional Multi-Probe Expansion Board CA-A13 is installed, each probe connector has its own separate set of memory channels (11 standard; 100 if optional Multi-Probe Memory Card CA-A17, Multi-Probe Analyzer Card-G CA-A18, or Multi-Probe Analyzer Card-R CA-A19 is used) for storing calibration data for a user-selected reference, standard color data, or RGB emission characteristics of CRT phosphors. However, the ID label input for a memory channel of one probe connector will be applied to the same-numbered memory channel for all probe connectors.

Probe connector number		P1	P2	P3	P4	P5
Available memory	Standard	00 - 10	00 - 10	00 - 10	00 - 10	00 - 10
channels for data	When using optional cards for Multi-Probe Expansion Board	00 - 99	00 - 99	00 - 99	00 - 99	00 - 99
For ID label	Standard	00 - 10 (same for all probe connectors)				
	When using optional cards for Multi-Probe Expansion Board	00 - 99 (same for all probe connectors)				

Setting/Changing Standard Color Data

• It is not necessary to set standard color data if calibration to a user-selected reference has been performed (p. 33) or RGB emission characteristics of CRT phosphors have been set (p. 36) using the selected memory channel. During calibration to a user-selected reference, the standard color data is automatically set to the calibration data; during setting of RGB emission characteristics, standard color data is automatically set to the values for W (standard white). However, if it is desired to set the standard color data to other data than those automatically set, the following procedure can be performed.

Standard color data are necessary for using the analog display, which shows the percent difference between measured data and the standard color data or between two values of measured data. Standard color data is stored separately for each memory channel of each probe connector. Thus, if it is desired to use the same standard color data for several memory channels (or for the same memory channel of several probe connectors when using optional Multi-Probe Expansion Board CA-A13), the procedure for setting standard color data must be repeated for each memory channel (or probe connector).

Standard color data should be set according to either of the following procedures for the situations listed below:

- a. To set the standard color data for memory channel 00.
- b. When measurements will be taken based on Minolta's calibration standard (when calibration to a user-selected reference has not been performed).
- c. To set standard color data to values different from the calibration data set during calibration to a user-selected reference.
- d. When using an optional Analyzer Card, to set the standard color data to values different from those set for W (standard white) during setting of RGB emission characteristics of CRT phosphors.

SETTING/CHANGING PROCEDURE

Standard color data can be set or changed by measure ment or (for memory channel 00 only) by inputting numerical xyY values using the number keys.

By Measurement


• When using optional Multi-Probe Expansion Board CA-A13, press PROBE repeatedly to select the desired probe connector number.

Probe con	nector numb	er
CH00	PЗ	
Ε]	ı

1. Press **MEMORY CH** △ or ☑ repeatedly to select the memory channel in which the standard color data will be stored.

	Memory channe		
CH	01	F1	
	Ε] [

2. Place the receptor area of the measuring probe flat against the surface of the CRT on which the desired standard color has been generated.

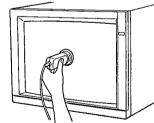

- 3. While holding the measuring probe against the surface of the CRT, press **HOLD**. The measured value will be held in the digital display.
- 4. Press **ENTER** . The data measured and held in step 3 will be stored as the standard color data for the selected memory channel.
- 5. Press **HOLD** again to cancel display hold and start measurements.
- The standard color data stored in the selected memory channel can be checked at any time by pressing **M R**.
- At the time of shipment, the standard color data for all memory channels is set to x = 0.313, y = 0.329, and Y = 40.0 cd/m².

Note:

- The standard color data which are set will be used for all display modes: xyY, T∆uvY, and analyzer (RBG).
- If the CRT being measured has a luminance of 1.00cd/m² or less, or if the ambient temperature has changed since zero calibration was performed, perform zero calibration before setting standard color data.
- The static electricity of the surface of the CRT should be eliminated as much as possible before setting standard color data.
- Be sure that the probe is held flat against the CRT surface. If the probe is at an angle to the surface or is moved, standard color will not be set accurately.
- If "OVER" is shown in the liquid crystal display, it might not be possible to set the generated color as the standard color.
- Do not subject the measuring probe to shock or strong force. Do not pull on or sharply bend the connecting cord, or subject it to strong force.

By Inputting Numerical Values

Only the standard color for memory channel 00 can be set by inputting numerical values.

 When using optional Multi-Probe Expansion Board CA-A13, press PROBE repeatedly to select the desired probe connector number. 	Probe conne	ctor number P3
 When using an optional Analyzer Card, press MODE repeatedly to select either xyY or T∆uvY display mode. 		

1. Press **MEMORY CH** △ or □ repeatedly to select memory channel 00.

Memory channel		
CHØ1	P1	
l E]	

Press CAL. The presently stored standard color data will appear in the liquid crystal display and the cursor will appear under the first digit of the first value of the displayed data. Calibration LED will light. CH00 x y Y P1 <u>4</u>00 400 15.0

3. Use number keys (0 through 9) to set the first value of the standard color data. Cursor will automatically move to the next digit each time a number key is pressed.

CH00 x 9 Y P1 <u>3</u>13 400 15.0

4. Press **CURSOR** ▶ to move to the next value.

CH00 x y Y P1 313 <u>4</u>00 15.0

5. Use number keys (**0** through **9**) to set the next value of the standard color data. Cursor will automatically move to the next digit each time a number key is pressed.

CH00 x y Y P1 313 <u>3</u>29 15.0

6. Press CURSOR ▶ to move to the last value.

CH00 x 9 Y P1 313 329 <u>1</u>5.0

Use number keys (0 through 9 and .) to set the last value of the standard color data. Cursor will automatically move to the next digit each time a number key is pressed. CH00 x 9 Y P1 313 329 <u>2</u>2.5

- 8. Press ENTER . The data set in steps 3 through 7 will be stored as the standard color data for memory channel 00. The calibration LED will become not lit.
- To interrupt the setting procedure, press CAL again before pressing <u>ENTER</u>. The
 calibration LED will become not lit.
- The standard color data stored in the selected memory channel can be checked at any time by pressing M R.
- At the time of shipment, the standard color data for all memory channels is set to x = 0.313, y = 0.329, and Y = 40.0 cd/m².

Note:

- The standard color data which are set will be used for all display modes: xyY, T∆uvY, and analyzer (RBG).
- If "OVER" is shown in the liquid crystal display, the CA-100 might not respond when CAL is pressed.
- Do not press MODE, M R, REMOTE, MEMORY CH or of O-CAL, RANGE, ID, or PROBE while in the middle of
 the procedure for setting standard color data. Pressing any of these keys will result in the setting mode being
 canceled and the operation corresponding to the key being performed.

Calibration to a User-Selected Reference

Calibration to a user-selected reference is performed by measuring a reference CRT and inputting its calibration data to determine the correction factor required to meet a user's specific requirements. Subsequent measurements are then calculated using this correction factor. Calibration to a user-selected reference can be performed separately for each memory channel (except memory channel 00) of each probe connector number.

At the time of shipment, the calibration data stored in all memory channels is the calibration data for Minolta's standard. Calibration to a user-selected reference can be performed to:

- Adjust for slight variations between the spectral response of the measuring probe and the CIE 1931 colormatching functions;
- b. Standardize the response of several CA-100 units; or
- c. Standardize the response of several measuring probes (when using optional Multi-Probe Expansion Board CA-A13)
- When calibration to a user-selected reference is performed, the calibration data is also automatically stored as the standard color data for the selected memory channel. If it is desired to use different standard color data, the standard color data can be changed according to the procedure on p. 30 after calibration to a user-selected reference has been performed.

To standardize the response of several CA-100 units or to standardize the response of several probes when using the optional Multi-Probe Expansion Board CA-A13, follow either of the procedures below.


- a. When the values of the user-selected reference color displayed on the CRT to be used for calibration are known, these values should be used as the calibration data for all CA-100 units (or measuring probes) when performing calibration according to CALIBRATION PROCEDURE on p. 34.
- b. If the values of the user-selected reference color displayed on the CRT to be used for calibration are not known:
 - 1. Select one CA-100 (or measuring probe) as the master unit (or master measuring probe).
 - 2. Set display mode to xyY and place the master unit's measuring probe (or the master measuring probe) against the surface of the CRT displaying the reference color.
 - 3. With the measuring probe firmly against the CRT surface, press **HOLD**.
 - 4. Use the values measured in step 3 as the calibration values for the reference color displayed on the CRT to calibrate all other CA-100 units (or measuring probes) according to CALIBRATION PROCEDURE on p. 34.

CALIBRATION PROCEDURE

- Memory channel 00 cannot be calibrated to a user-selected reference.
- Calibration to a user-selected reference should be performed using a CRT of the same type as the CRTs which will be measured. Differences in phosphors, light-distribution characteristics, glass thickness, etc. between CRT types may result in measurement differences.
- If calibration to a user reference is performed for a memory channel in which standard color data are already stored, the previously stored standard color data will be erased when calibration is completed.
- When using optional Multi-Probe Expansion Board CA-A13, press **PROBE** repeatedly to select the desired probe connector number. The memory channels for each probe connector are separate; for a selected memory channel, each probe connector must thus be calibrated separately to the same reference, or can be calibrated to different references if desired.
- Press **MODE** repeatedly to select xyY display mode.
- 2. Press **MEMORY CH** △ or ☑ repeatedly to select the memory channel to be calibrated.

Memory channel
CHØ1 P1
C 3

3. Place the receptor area of the measuring probe flat against the surface of the CRT on which reference color has been generated.

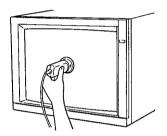

- 4. Press HOLD. The latest measured value will be held in the digital display.
- 5. Press **CAL.** The previously set calibration data will appear in the liquid crystal display as shown at right and the calibration LED will light. The cursor will appear under the first digit of the first value in the liquid crystal display.

CH01 x y Y P1 <u>3</u>13 329 40.0

- 6. Use number keys (0 through 9) to set the first value of the calibration data for the reference color shown on the CRT. Cursor will automatically move to the next digit each time a number key is pressed.
- 7. Press **CURSOR** ▶ to move to the next value.
- 8. Use number keys (**0** through **9**) to set the next value of the calibration data. Cursor will automatically move to the next digit each time a number key is pressed.
- 9. Press **CURSOR** ▶ to move to the last value.
- 10. Use number keys (0 through 9 and .) to set the last value of the calibration data. Cursor will automatically move to the next digit each time a number key is pressed.

6.-10. Enter the values that you want it to report.

- 11. Press **ENTER**. The calibration data will be stored in the selected memory channel and the data will also be automatically stored as the standard color data for that memory channel.
- 12. Press HOLD again to cancel display hold and start measurements.
 - To interrupt calibration procedure, press CAL again before pressing <u>ENTER</u>. The
 calibration lamp will become not lit.
 - If the standard color data of the selected memory channel has not been changed since calibration to a user-selected reference was performed, the stored standard color data (which will be the same as the calibration data) can be checked by pressing M R. If the standard color data was changed after calibration to a user-selected reference was performed, the standard color data will be different from the calibration data.
 - Calibration can also be performed without using display hold (without pressing HOLD as in step 4). In this case, the data displayed when <u>ENTER</u> is pressed in step 11 will be stored as the calibration data.

Note:

- The calibration data is also stored as the standard color data, which will be used for all display modes: xyY, T∆uvY, and analyzer (RBG).
- If the CRT being measured has a luminance of 1.00cd/m² or less, or if the ambient temperature has changed since zero calibration was performed, perform zero calibration before performing calibration to a user-selected reference.
- The static electricity of the surface of the CRT should be eliminated as much as possible before calibration or measurement.
- Be sure that the probe is held flat against the CRT surface. If the probe is at an angle to the surface or is moved, calibration will not be accurate.
- If "OVER" is shown in the liquid crystal display, the CA-100 may not respond when CAL is pressed.
- Do not press MODE, M R, REMOTE, MEMORY CH o or O-CAL, RANGE, ID, or PROBE while in the middle of the calibration procedure. Pressing any of these keys will result in calibration mode being canceled and the operation corresponding to the key being performed.
- Do not subject the measuring probe to shock or strong force. Do not pull on or sharply bend the connecting cord, or subject it to strong force.

Setting RGB Emission Characteristics of CRT Phosphors

In order to use analyzer (RBG) display mode (available only with an optional Analyzer Card), it is necessary to input the RGB emission characteristics of the CRT phosphors.

- The RGB emission characteristics of the phosphors should be set using a CRT of the same type as the CRTs which will be measured. Differences in phosphors, light-distribution characteristics, glass thickness, etc. between CRT types may result in measurement differences.
- If RGB emission characteristics are set for a memory channel in which standard color data are already stored, the previously stored standard color data will be erased when the emission characteristics are set. Standard color data set for the selected memory channel are used for all display modes: xyY, T\(\triangle uvY\), and analyzer (RBG).


SETTING PROCEDURE

- Before setting RGB emission characteristics of the CRT phosphors, insert the optional Analyzer Card in the memory card slot, set POWER switch to **ON**, and perform zero calibration.
- When using optional Multi-Probe Expansion Board CA-A13, press **PROBE** repeatedly to select the desired probe connector number.
- 1. Press MODE repeatedly to select analyzer (RBG) display mode.
- 2. Press **MEMORY CH** △ or ☑ repeatedly to select the memory channel for which RGB emission characteristics will be set.


Men	nory channel
СНОО	P1
[]

- 3. Press **CAL.** The display shown at right will appear in the liquid crystal display. Calibration LED and W, R, G, and B LEDs will light.
- CH01 P1 W R G B

- 4. Set emission characteristics of red phosphor:
 - a. Set CRT so that pure red is generated.
 - b. Place receptor area of measuring probe flat against the surface of the CRT.

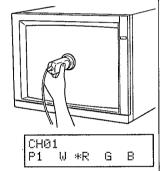

- c. Press 4 next to the R LED. "*" will appear before "R" in the liquid crystal display.
- 5. Set emission characteristics of green phosphor:
 - a. Set CRT so that pure green is generated.
 - b. Place receptor area of measuring probe flat against the surface of the CRT.
 - c. Press 1 next to the G LED. "*" will appear before "G" in the liquid crystal display.



- 6. Set emission characteristics of blue phosphor:
 - a. Set CRT so that pure blue is generated.
 - b. Place receptor area of measuring probe flat against the surface of the CRT.
 - c. Press **0** next to the B LED. "*" will appear before "B" in the liquid crystal display.

CH01 P1 W *R *G *B

- 7. Set standard white values:
 - a. Set CRT so that standard white is generated.
 - b. Place receptor area of measuring probe flat against the surface of the CRT.
 - c. Press 7 next to the W LED. "**" will appear before "W" in the liquid crystal display.

CH01 P1 *W *R *G *B

- Press <u>ENTER</u>. The values for R, G, B, and W will be stored as the emission characteristics of the CRT phosphors, and the W, R, G, B, and calibration LEDs will become not lit. The values for white will also be stored as the standard color data.
- Setting the R, G, B, and W values (steps 4, 5, 6, and 7) can be done in any order.
- Setting the R, G, B, or W value can be repeated if a mistake is made by generating
 the appropriate color on the CRT and pressing the appropriate key again before
 pressing ENTER (before step 8).
- To interrupt the procedure for setting RGB emission characteristics of CRT phosphors, press CAL again before pressing ENTER (before step 8).
- If M R is pressed, "100" will be displayed as the values for the standard color.

Note:

- The data for white is stored as the standard color data, which will be used for all display modes: xyY, T△uvY, and analyzer (RBG).
- At the time of shipment, no emission characteristics of CRT phosphors are stored in memory. If analyzer (RBG) display mode is set before RGB emission characteristics are input, operation will not be correct.
- If the CRT being measured has a luminance of 1.00cd/m² or less, or if the ambient temperature has changed since zero calibration was performed, perform zero calibration before setting emission characteristics of CRT phosphors.
- The static electricity of the surface of the CRT should be eliminated as much as possible before setting emission characteristics of CRT phosphors.
- Be sure that the probe is held flat against the CRT surface. If the probe is at an angle to the surface or is moved, RGB emission characteristics of CRT phosphors will not be set accurately.
- If "OVER" is shown in the liquid crystal display, the CA-100 may not respond when CAL is pressed.
- Do not press MODE, M R, MEMORY CH △ or ☑ 0-CAL, RANGE, ID, or PROBE while in the middle of the procedure for setting emission characteristics of CRT phosphors. Pressing any of these keys will result in the setting mode being canceled and the operation corresponding to the key being performed.
- Do not subject the measuring probe to shock or strong force. Do not pull on or sharply bend the connecting cord, or subject it to strong force.

Inputting ID Label

An ID label can be input by the user to enable easy identification of memory channels. The ID label might consist of, for example, a code or abbreviation specifying the type of CRT used to calibrate the memory channel and/or set the target color data. The ID label is shown (along with the selected memory channel and probe connector number) in the liquid crystal display at the time of measurement. The ID label can be up to 10 characters long; available characters include numbers ("0" through "9"), letters ("A" through "Z"), period ("."), hyphen ("—"), and a blank space (" ").

- When using Multi-Probe Expansion Board CA-A13, the ID label input for a memory channel will be applied to the same memory channel of all probe connector numbers. It is not possible to set different ID labels for the same memory channel of different probe connectors.

Mei	mory chanel	
CH	101 C	F1]

- 2. Press **ID**. The previously set ID label will appear in the liquid crystal display, with a cursor under the first character position of the ID label.
- CH01 P1
- Use number keys (0 through 9 and .) and ALPHA ▲ or ▼ to select the desired character.
- CH01 P1 [<u>E</u>XT D-1.50]

ALPHA ▲ changes displayed character in alphabetical order;
 hyphen ("—") and space ("") appear between "Z" and "A":
 A → B → C → ... Y → Z → ... → (space) → A →

ALPHA ▼ changes displayed character in reverse alphabetical order:

 $A \rightarrow (space) \rightarrow ---- \rightarrow Z \rightarrow Y \rightarrow ...C \rightarrow B \rightarrow A$

Displayed character will change to next character each time

ALPHA ▲ or ▼ is pressed; displayed character will change continuously if **ALPHA** ▲ or ▼ is held pressed.

- Cursor will automatically move right when a character is input using a number key
 (0 through 9 or .); cursor will not move right automatically when ALPHA ▲ or ▼ is
 used.
- If necessary, press CURSOR ► to move to the next character position. Cursor will move right each time CURSOR ► is pressed; cursor will move right continuously if CURSOR ► is held pressed.
- 5. Repeat steps 3 and 4 to input the remaining characters of the desired ID label.
- Press <u>ENTER</u>. The ID label will be stored in the selected memory channel.
 The ID label will remain in memory until changed by the user, even if the CA-100 is switched off.
- To interrupt the input of ID label, press **ID** again before pressing **ENTER** (before step 6).

Note:


- If "OVER" is shown in the liquid crystal display, the CA-100 may not respond when ID is pressed.

Setting Analog Display Range

The analog display shows the percent difference between the measured data and the standard color data. The range for one LED (of the three center green LEDs) can be set by the user according to the procedure below.

- When using an optional Analyzer Card, the range set for xyY and T∆uvY display modes is separate from the range set for analyzer (RBG) display mode.
- When using optional Analyzer Card-G CA-A15 or Multi-Probe Analyzer Card-G CA-A18 with display mode set to analyzer (RBG), the analog display ranges for R/G, B/G, and △G can be set separately.
- When using optional Analyzer Card-R CA-A16 or Multi-Probe Analyzer Card-R CA-A19 with display mode set to analyzer (RBG), the analog display ranges for △R, B/R, and G/R can be set separately.

The analog display range can be set from 0.1 to 99% per green LED: 0.1 to 9.9% in 0.1% increments, 10 to 99% in 1% increments. The per-LED display range for the red LEDs is twice that of the green LEDs. Thus, for an analog display range of n, the display would be read as shown below.

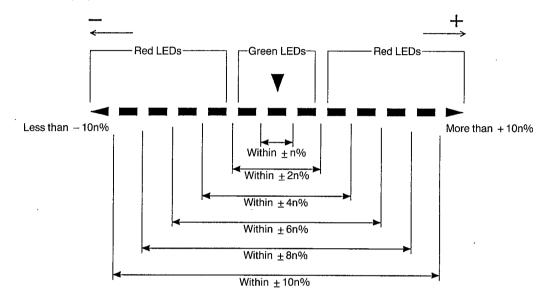

FORMULAS

The formulas for determining the values indicated on the analog displays are as follows:

Display mode: xyY or T∆uvY

$$\triangle x = (\frac{x - xt}{xt}) \times 100 (\%)$$

$$\triangle y = (\frac{y - yt}{yt}) \times 100 (\%)$$

$$\triangle Y = (\frac{Y - Yt}{Yt}) \times 100 \,(\%)$$

x, y, Y: Measured values

xt, yt, Yt: Standard color data

When using optional Analyzer Card-G CA-A15 or Multi-Probe Analyzer Card-G CA-A18 with analyzer (RBG) display mode:

$$R/G = (\frac{R-G}{G}) \times 100 (\%)$$

$$B/G = (\frac{B-G}{G}) \times 100 (\%)$$

$$\triangle G = (\frac{G - Gt}{Gt}) \times 100 (\%) = G - 100 (\%)$$

R, G, B: Measured values

Gt: Standard color value adjusted to provide a G beam intensity of 100 for the standard color

When using optional Analyzer Card-R CA-A16 or Multi-Probe Analyzer Card-R CA-A19 with analyzer (RBG) display mode:

$$\triangle R = (\frac{R - Rt}{Rt}) \times 100 (\%) = R - 100 (\%)$$

$$B/R = (\frac{B-R}{R}) \times 100 (\%)$$

$$G/R = (\frac{G-R}{R}) \times 100 \, (\%)$$

R, G, B: Measured values

Rt: Standard color value adjusted to provide an R beam intensity of 100 for the standard color

SETTING PROCEDURE

- When using an optional Analyzer Card, press MODE repeatedly to select the desired display mode.
- Press RANGE. The presently set analog display range will appear in the LCD panel, with the cursor under the first digit of the first value.

RANGE x,9 Y (%) <u>1</u>.0 1.0

When using an optional Analyzer Card (G standard):

When using an optional Analyzer Card (R standard):

RANGE G B/G,R/G (%)<u>1</u>.0 1.0 RANGE R B/R,G/R (%)<u>1</u>.0 1.0

- 2. Use number keys (**0** through **9** and .) to input the first value of the analog display range. Cursor will automatically move to the next digit each time a number key is pressed.
- 3. Press **CURSOR** ▶ to move to the next value.
- 4. Use number keys (0 through 9 and .) to input the second value of the analog display range. Cursor will automatically move to the next digit each time a number key is pressed.
- 5. Press **ENTER**. The values input in steps 2 through 4 will be stored as the analog display range for the selected display mode.
- To interrupt the procedure for setting the analog display range, press **RANGE** again before pressing **ENTER** (before step 5).
- The values of the analog display range will be applied to all memory channels (and probe connector numbers if using optional Multi-Probe Expansion Board CA-A13).
- At the time of shipment, the analog display range is set to 10%.
- The values of the analog display range will remain in memory even if the POWER switch is set to OFF.

Note:

- If "OVER" is shown in the liquid crystal display, the CA-100 may not respond when RANGE is pressed.
- Do not press MODE, M R, REMOTE, MEMORY CH ☐ or ☐, 0-CAL, ID, CAL, or PROBE while in the middle of the procedure for setting analog display range. Pressing any of these keys will result in the setting mode being canceled and the operation corresponding to the key being performed.

RELATION BETWEEN DIGITAL AND ANALOG DISPLAYS

The digital display of the CA-100 shows the three most significant figures of the measured value. The fourth significant figure of the measured value is rounded off.

Depending on the analog display range which is set, the calculations performed for the analog display may use more than four significant figures. Thus, if the analog display range is set to a small value, the accuracy of the analog display may be higher than that of the digital display. In this case, the values shown by the two displays may be slightly different.

Checking Stored Data

STANDARD COLOR DATA

To check the standard color data stored in the selected memory channel, press **M R**. The standard color data will appear in the liquid crystal display as shown at right.

CH01 x 9 Y MR 313 329 22.5

CALIBRATION DATA


If the standard color data for the selected memory channel was not changed after calibration to a user-selected reference was performed, the calibration data can be checked according to the procedure above for checking standard color data, since the calibration data will be the same as the standard color data.

However, if the standard color data was changed after calibration to a user-selected reference was performed, it is not possible to check the calibration data.

MEASURING PROBE SERIAL NUMBER

Serial Number of Measuring Probes Used For Setting Data


The serial number of the measuring probe used for performing calibration to a user-selected reference and the serial number of the measuring probe used for setting standard color data can be checked by pressing **PROBE** while **M** \mathbf{R} is held pressed. The serial numbers of the measuring probes will appear in the liquid crystal display as shown below.

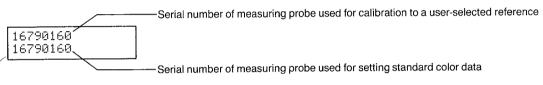

At the time of shipment, the stored measuring probe serial numbers are all set to "00000000"

When using an optional Analyzer Card:

The serial number of the measuring probe used for setting RGB emission characteristics of CRT phosphors and the serial number of the measuring probe used for setting standard color data can be checked by pressing **PROBE** while **M R** is held pressed. The serial numbers of the measuring probes will appear in the liquid crystal display as shown below.



• At the time of shipment, the stored measuring probe serial numbers are all set to "00000000"

Serial Number of Measuring Probe Presently Being Used

To check the serial number of the measuring probe presently being used, press **PROBE**. While **PROBE** is held pressed, the serial number of the measuring probe presently being used will be shown in the liquid crystal display.

PROBE [P1] NO.16790160

When using Multi-Probe Expansion Board CA-A13 with more than one measuring probe connected to the CA-100, pressing PROBE will select the next probe connector number. If PROBE is held pressed, the serial number of the measuring probe connected to the selected probe connector number will be shown in the display.


TAKING MEASUREMENTS

After all preparations have been completed and desired supplementary operations have been performed, measurements can be taken by following the steps below.

1. Press MEMORY CH
or
or or loselect the desired memory channel. Supplementary operations (calibration to a user-selected reference, setting of RGB emission characteristics for CRT phosphors, and setting/changing standard color data) should have already been performed for the selected memory channel.

Memory channe	el
CHØ1 [P1]

- If measurements will be taken based on Minolta's calibration standard and the analog displays will not be used, it is not necessary to select a memory channel for which supplementary operations have been performed.
- 2. Place the receptor area of the measuring probe flat against the surface of the CRT to be measured. Measurements will be started immediately and the measured data will be shown in the digital and analog displays according to the selected display mode.

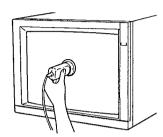

When using optional Multi-Probe Expansion Board CA-A13:


Measurements are taken simultaneously by all connected measuring probes. The displayed data is the measured data for only the selected probe connector number, which is shown in the liquid crystal display. To change the selected probe connector number, press **PROBE**.

Note:

- The static electricity of the surface of the CRT should be eliminated as much as possible before calibration or measurement.
- If the CRT being measured has a luminance of 1.00cd/m² or less, or if the ambient temperature has changed since zero calibration was performed, perform zero calibration before taking measurements.
- If the CRT being measured has a luminance of 1.00cd/m² or less and will be measured over a long period of time, zero calibration should be performed approximately once an hour.
- Be sure that the measuring probe is held flat against the CRT surface. If the measuring probe is at an angle to the surface or is moved, measurements will not be accurate.
- Do not subject the measuring probe to shock or strong force. Do not pull on or sharply bend the connecting cord, or subject it to strong force.

Display Hold

To set display hold and hold the presently displayed data in the digital and analog displays, press **HOLD**. The displays will be held and the HOLD LED will light.



• If any of the measurement conditions (display mode, etc., with the exception of SYNC mode) are changed while display is being held, the values corresponding to the new measurement conditions will be calculated and displayed.

To cancel display hold, press **HOLD** again. Display hold will be canceled, the HOLD LED will become not lit, and the displays will show the latest measurement data.

Note:

- Display hold cannot be set in the following situations:
 - a. After 0-CAL has been pressed, but before measured data appears in the displays.
 - b. While the error message "NO SYNC. SIGNAL" is shown in the liquid crystal display.
- If 0-CAL is pressed while display hold is set, display hold will be canceled and zero calibration will be performed.

Displayed Data

DIGITAL DISPLAY

The CA-100's digital display shows the numerical measured data. Displayed values are updated once every three measurement cycles.

Displayed values: For xyY display mode: x, y, and Y

For T∆uvY display mode: T, ∆uv, and Y

- The displayed values for x and y or for △uv are 1000 times the actual value.
- The displayed value for T consists of the three most significant figures of the measured value.

Display range: Y: 0.01 to 999cd/m2 (0.01 to 292 fL)

0.01 to 9.99 in increments of 0.01 10.0 to 99.9 in increments of 0.1 100 to 999 in increments of 1

*For Y values of less than 0.20cd/m \pm (0.06 fL), the digital display will be blinking.

* 3 1 2 * 2 8 0 * 8 4. 1

T: 2300 to 20000K ∆uv: |∆uv | <0.1 T 7050

T∆uvY display mode

xyY display mode

ANALOG DISPLAY

The analog displays show the percent difference between the measured data and the standard color data.

Displayed values: $\triangle x$, $\triangle y$, $\triangle Y$

Display range depends on the setting of analog display range (see p. 39).

Δx v
40000000000
ΔУ ▼
400000=00000A
ΔΥ
400000 = 00000

WHEN USING AN OPTIONAL ANALYZER CARD

When using an optional Analyzer Card with analyzer (RBG) display mode, displays function as follows:

Digital Display

Displayed values: R, B, and G

R, B, and G express the presently measured beam intensities as a percentage of the beam intensities of the standard color (W) normalized to 100. If the measured beam intensities are equal to those of W, "100" would be displayed.

Display range: 0.1 to 99900%

0.1 to 99.9% in increments of 0.1 100 to 999 in increments of 1 1000 to 9990% in increments of 10* 10000 to 99900% in increments of 100**

*For measured data of 1000 to 9990%, "X10" will be shown in the liquid crystal display and the true measured data can be obtained by multiplying the three-digit values shown in the digital display by 10.

**For measured data of 10000 to 99900%, "X100" will be shown in the liquid crystal display and the true measured data can be obtained by multiplying the three-digit values shown in the digital display by 100.

. R	9 6.2	
В	8 8.8	
G	9 0.5	
	•	

CH01 X10 P1 []

CH01 X100 P1

Analog Display

Displayed values:

For Analyzer Card-G CA-A15 or Multi-Probe Analyzer Card-G CA-A18:

R/G: Ratio of measured R value to measured G value B/G: Ratio of measured B value to measured G value

△G: Difference between measured G value and G value of standard color data

Y R/G
Y S/G
V AG

For Analyzer Card-R CA-A16 or Multi-Probe Analyzer Card-R CA-A19:

R: Difference between measured R value and R value of standard color data

G/R: Ratio of measured G value to measured R value

B/R: Ratio of measured B value to measured R value

Display range depends on the setting of analog display range (see p. 39).

ADJUSTING WHITE BALANCE USING ANALYZER (RBG) DISPLAY MODE

• Analyzer (RBG) display mode is available only when using an optional Analyzer Card.

White-balance adjustment is most easily done using analyzer (RBG) display mode. In analyzer (RBG) display mode, the measured R, B, and G beam intensities are displayed individually as percentages of the RGB emission characteristics for CRT phosphors which were previously stored in memory. Therefore, when adjusting the R beam intensity, only the measured R value changes; the B and G values do not change. Individual display of the R, B, and G beam intensities makes it easy to match the standard color (W).

Before white balance can be performed in analyzer (RBG) display mode, the RGB emission characteristics for the CRT phosphors and the standard color (W) must be input (see p. 36). The standard color (W) which is input should be the white which is desired as the final result of white-balance adjustment.

In analyzer (RBG) display mode, when the R, B, and G values shown in the digital display are all 100, the white displayed the CRT matches the standard color (W) stored in the selected memory channel (the xyY values are the same). Accordingly, only the center green LEDs of the analog display will be lit.

R 100 B 100 G 100

If the values of R, B, and G shown in the digital display are not 100 but are all the same, the luminance Y of the measured CRT is different from that of the standard color (W) stored in memory but the chromaticity coordinates x and y are the same. Thus, it is only necessary to adjust the luminance of the CRT. In this case, since the x and y coordinates are correct, only the center green LEDs of the R/G and B/G lines (for G-standard Analyzer Cards) or of the B/R and G/R lines (for R-standard Analyzer Cards) of the analog display will be lit.


R / D. D B / D. D G / D. D

Four different optional Analyzer Cards are available for the CA-100, for adjustment of different types of CRTs:


- For adjustment of CRTs for which the G beam intensity cannot be independently adjusted, Analyzer Card-G CA-A15 (when using a single measuring probe) or Multi-Probe Analyzer Card-G CA-A18 (when using the optional Multi-Probe Expansion Board CA-A13 and more than one measuring probe) should be used.
- For adjustment of CRTs for which the R beam intensity cannot be independently adjusted, Analyzer Card-R CA-A16 (when using a single measuring probe) or Multi-Probe Analyzer Card-R CA-A19 (when using the optional Multi-Probe Expansion Board CA-A13 and more than one measuring probe) should be used.
- For adjustment of CRTs for which all three beam intensities (R, G, and B) can be independently adjusted, either Analyzer Card-G CA-A15 or Analyzer Card-R CA-A16 can be used with a single measuring probe; either Multi-Probe Analyzer Card-G CA-A18 or Multi-Probe Analyzer Card-R CA-A19 can be used with the optional Multi-Probe Expansion Board CA-A13 and more than one measuring probe.

Procedure

- 1. Set POWER switch to OFF.
- 2. Position the Analyzer Card as shown at right and insert the card fully into the memory card slot.

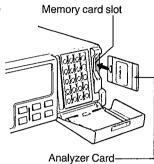


3. Set POWER switch to ON.

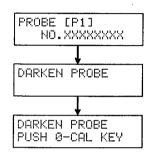

- 4. Place receptor area of measuring probe face down on a flat surface so that no light reaches the receptor area and press **0-CAL** to perform zero calibration.
- If optional Multi-Probe Expansion Board CA-A13 has been installed and more than one probe is connected to the CA-100, place receptor areas of all probes face down on a flat surface so that no light reaches the receptor area of any probe before pressing 0-CAL.
- ZERO CALIBRATION

 CH00 P1
 []
- 5. Press MODE repeatedly to select analyzer (RBG) display mode.
- 6. Press **MEMORY CH** △ or ఆ to select the memory channel containing the desired RGB emission characteristics of CRT phosphors.
- 7. If optional Multi-Probe Expansion Board CA-A13 has been installed and more than one measuring probe is being used, press **PROBE** repeatedly to select the desired probe connector number.
- 8. Place the receptor area of the measuring probe flat against the surface of the CRT to be adjusted. Measurements will be started immediately and the measured data will be shown in the digital and analog displays.



9. Adjust white balance according to the procedure below.

Normally, white balance is adjusted by adjusting the cutoff and drive voltages. However, in the procedure below, the CRT is adjusted so that the white generated on the CRT matches the standard color (W) stored in memory.

* 120 * 90.0 * 110

In this example, the initial measured values are shown at right. The R beam intensity is 20% too high, B beam intensity is 10% too low, and the G beam intensity is 10% too high.

• Display examples are intended as only examples and are not displays obtained through actual measurements.

If using a G-standard analyzer card (Analyzer Card-G CA-A15 or Multi-Probe Analyzer Card-G CA-A18):

- a. Adjust luminance (or G beam intensity) first so that the value shown in the digital display for G becomes 100.
 - The other values (R and B) may change somewhat if the luminance is adjusted.

- 120
 90.0
 110

 $\begin{array}{ccccc}
\nabla & & & \Delta G \\
\neg & & & & & & & \\
\neg & & & & & & & \\
\end{array}$ Analog display (\(\Delta\G\))

- b. Adjust B beam intensity so that the value shown in the digital display for B becomes 100.
- Adjust R beam intensity so that the value shown in the digital display for R becomes 100.

When all beam intensities have been adjusted so that the values shown in the digital display are all 100, the white displayed by the CRT is the same (xyY values are the same) as the standard color (W) stored in the selected memory channel.

If using an R-standard analyzer card (Analyzer Card-R CA-A15 or Multi-Probe Analyzer Card-R CA-A18):

- a. Adjust luminance (or R beam intensity) first so that the value shown in the digital display for R becomes 100.
 - The other values (B and G) may change somewhat if the luminance is adjusted.

- b. Adjust B beam intensity so that the value shown in the digital display for B becomes 100.
- c. Adjust G beam intensity so that the value shown in the digital display for G becomes 100.

When all beam intensities have been adjusted so that the values shown in the digital display are all 100, the white displayed by the CRT is the same (xyY values are the same) as the standard color (W) stored in the selected memory channel.

DATA COMMUNICATION

Data communication can be performed according to the RS-232C standard using the RS-232C terminal on the back of the CA-100 or, if the optional GP-IB Interface Board CA-A20 is installed, according to the GP-IB standards. The data formats for input of commands or output of measured data are the same for either data communication method.

RS-232C Data Communication

The CA-100 is equipped with an RS-232C terminal for data communication.

• If the optional GP-IB Interface Board CA-A20 is installed, data communication cannot be performed using the RS-232C terminal.

CONNECTION WITH COMPUTER

- 1. Set POWER switches of both the CA-100 and the computer to OFF.
- 2. Using the appropriate cable, connect the CA-100 and the computer according to the connection diagram below.

Pin diagram of CA-100's RS-232C terminal



Pin number	Signal	Input/ Output	Purpose
1	. FG		Field ground
2	TXD	Output	Transmitted data
3	RXD	Input	Received data
4	RTS	Output	Request to send
5	CTS	Input	Clear to send
6	NC		Not connected
7	GND	7	Signal ground
8 through 19	NC		Not connected
20	DTR	Output	Data terminal ready
21 through 25	NC		Not connected

*Pin 20 normally outputs +5V.

Connection diagram

Connection dia	gram	_				
CA-	100			Computer Pin number		•
Pin number	Signal			Signal	Using 25-pin D-subminiature plug	Using 9-pin D-subminiature plug
1	FG			FG	1	NC
2	TXD	\rightarrow		TXD	2	3
3	RXD		—	RXD	3	2
4	RTS			RTS	4	7
5	CTS	-	—	CTS	5	8
7	GND			DSR	6	6
20	DTR	 		GND	7	5

- Do not connect or disconnect the connecting cable while the computer or CA-100 are switched on.
- The internal connections of all RS-232C connecting cables are not the same. Check the internal connections of the
 cable before use.
- Set the POWER switch of the CA-100 to ON before switching on the computer. When switching off the system, switch
 off the computer before setting the POWER switch of the CA-100 to OFF.

COMMUNICATION PARAMETERS

The RS-232C communication parameters of the computer should be set to those of the CA-100 listed below.

Baud rate:

300, 600, 1200, 2400, 4800, 9600, 19200bps

Start bit:

Character length: 7 bits, ASCII code


Parity:

Even

Stop bits:

Setting Baud Rate

At the time of shipment, the baud rate of the CA-100 is set to 9600bps. The baud rate can be changed using the baudrate selector DIP switches on the back of the CA-100. Set the POWER switch to **OFF**, set the switches to the positions corresponding to the desired baud rate, and then set POWER switch back to **ON**. The switch positions corresponding to the different baud rates are shown below.

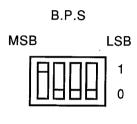

Baud-ı	Baud-rate selector DIP switches			Baud rate (bps)
MSB			LSB	
0	0	0	0	19200
1	0	0	0	9600
0	1	0	0	4800
1	1	0	0	2400
0	0	1	0	1200
1	0	1	0	600
0	1	1	0	300

• The above figure shows the switch settings at the time of shipment.

Note

- The baud rate cannot be changed while the CA-100 is switched on. Even if the positions of the baud-rate selector DIP switches are changed while the CA-100 is switched on, the baud rate will not change and the baud rate which was set at the time the POWER switch was set from OFF to ON will continue to be used.
- Do not set the baud rate selector DIP switches to positions other than those shown above.

COMMUNICATION PROCEDURE

Inputting Commands

The commands listed starting on page 67 can be input to the CA-100 in ASCII code to control the operation of the CA-100.

Multiple commands can be input at one time by connecting the commands with the character "%". When commands are connected in this way, a command string of up to 250 characters (including & and delimiter code) can be created and input to the CA-100.

- When multiple-command strings are used, be sure to wait until all operations requested by the command string are completed before inputting another command.
- Any of three delimiter codes can be used after a command (when inputting single commands) or at the end of a command string (when inputting multiple commands connected by "&"):
 - <CR> (carriage return), <LF> (line feed), or the combination of <CR> and <LF>.

To allow the computer to control the CA-100 via the RS-232C terminal, it is necessary to set the CA-100 to remotecontrol mode.

To set CA-100 to remote-control mode (REMOTE LED will light), do either of the following:

- a. Press REMOTE, or
- b. Input the command "F1" from the computer.
- While the CA-100 is in remote-control mode, the CA-100 will not respond to any key except REMOTE. However, luminance units can be changed using the luminance-unit selector switch.

To cancel remote-control mode, do either of the following:

- a. Press REMOTE again, or
- b. Input the command "F0" from the computer.

Outputting Data

The CA-100 can output the following four kinds of information to the computer when the CA-100 is set to remotecontrol mode:

a. Measurement data:

Output after each measurement

b. Error messages:

Output when a malfunction occurs with the CA-100; depending on error, remotecontrol mode may be canceled.

• Error messages "E25", "E26", or "E27" will be output regardless of whether

c. Data recalled from memory:

or not CA-100 is in remote-control mode or not. Output when the command "Kxx" (xx is the memory channel number from

which data is desired) is input from the computer.

d. Status information:

Output when the command "Z" is input from the computer.

<CR> (carriage return) is used as the delimiter for data output by the CA-100.

- If measurement data is not accepted by the computer within 0.5 seconds from the time preparation of the measurement data set has been completed, the measurement data will be discarded and the preparations for the next measurement data will begin. To signal that measurement data can be accepted by the computer, make the CTS pin of the RS-232C terminal active.
- The CA-100 will not accept any commands from the computer within approximately 0.5 seconds after data output has been completed.
- Data output will be interrupted and <CR> will be output in the following situations:
 - a. A command was accepted in the middle of data output.
 - b. An operation was started using one of the CA-100's keys or switches.
- If the CA-100 will not be controlled by the computer, it is recommended that the remote-control mode of the CA-100 is not set. If the remote-control mode is set but the computer is not ready to accept data, the time for one measurement becomes longer (by 0.5 seconds for each measuring probe being used) than the time required if remote-control mode is canceled.

Operation During Data Communication

Immediately after POWER switch is set to **ON** but before zero calibration has been performed, no measurements can be taken and thus no measurement data will be output. However, the following information can be output:

- a. Data recalled from memory using the command "Kxx" (xx is the memory channel from which data is requested).
- b. Status information requested using the command "Z"
- c. Error messages related to input commands ("E4", "E10", "E11", or "E12")
- d. Error messages related to performing zero calibration ("E21", "E29", or "E30")
- e. Error messages relating to connections ("E25", "E26", or "E27")

Display hold

Display hold can be set by inputting the command "H1" from the computer. When display hold is set, the displayed data will not change and data output is only performed once for the data which was measured just before the command was input.

- If the command is input when no measurement data is present, the error code "E10" (command error) will be output. Measurement data will not be present in the following circumstances:
 - a. After POWER switch is set to **ON** but before zero calibration is performed.
 - b. After zero calibration has been performed but before any measurements have been taken.
 - c. When the error message "NO SYNC. SIGNAL" is shown in the liquid crystal display.
- If the measurement data output when display hold is set is not accepted within 0.5 seconds, the measurement data will be discarded and the held measurement data cannot be output.
- While display hold is set, measurement data is not output. However, if measurement conditions are changed by
 inputting commands from the computer, the new measurement data (recalculated according to the new measurement conditions) will be output. If this data is not accepted within 0.5 seconds after it has been calculated, it will be
 discarded.
- Even while display hold is set, the following information can be output:
 - a. Data recalled from memory using the command "Kxx" (xx is the memory channel from which data is requested).
 - b. Status information requested using the command "Z"
 - c. Error messages related to input commands ("E3", "E4", "E5", "E10", "E11", "E12", or "E13")
- If the command "I" is input while display hold is set, zero calibration will be performed and display hold will be canceled.

To cancel display hold, input the command "H0" from the computer.

Sample Program

```
1000
       PRINT "
                 CA-100 RS-232C COMMUNICATION PROGRAM
1010
       ERRFLG = 0
                                                    :'Clear error_flag
:'Remote on
1020
       SD$ = "F1"
1030
         GOSUB 2030
                                                    :'Send command
1040
       PRINT
1050
       PRINT " Darken probe then press any key to perform 0-CAL "
1060
1070
       A$ = INKEY$
         IF A$ ="" THEN GOTO 1070
1080
       SD$ = "I"
1090
                                                    :'Start O-CAL
1100
         GOSUB 2030 : 'Sei
OPEN "COM1:9600,E,7,2,CS,DS" FOR INPUT AS #1
                                                    :'Send command
1110
                                                    :'Read data
           LINE INPUT #1,RD$
1120
1130
         CLOSE #1
         GOSUB 2100
                                                    : 'Error check
1140
1150 '
       IF RD$ <> "E21" THEN GOTO 1210
1160
       PRINT " Too bright.
1170
       PRINT " Darken probe.
1180
1190
     GOTO 1050
1200 '
1210 '#####
                                     #####"
                Select operation
1220
       CLS
1230
1240
       PRINT
       PRINT " Select operation.
                                                 " : PRINT
1250
       PRINT "
                                                11
                 Read data ---> Space key
1260
       PRINT "
                  Send command ---> C
                                                 **
1270
       PRINT "
1280
                  Quit
1290 '
1300
       A$ = INKEY$
         IF A$="C" OR A$="c" THEN GOTO 1360
1310
                                                    :'Send command
         IF A$=" " THEN GOTO 1510
                                                    :'Measure
1320
         IF A$="Q" OR A$="q" THEN GOTO 1670
1330
                                                    :'Quit
1340
       GOTO 1300
1350 '
1360 '#####
                Send command
                                   ######
1370 '
1380
       PRINT
       INPUT " Enter command : ",CD$
1390
         IF LEFT$(CD$,1)="K" OR CD$="Z" OR CD$="H1" THEN GOSUB 1740:GOTO 1240 IF CD$ = "I" GOTO 1090
1400
1410
1420
         OPEN "COM1:9600,E,7,2,CS,DS,LF" AS #1
1430
           PRINT #1,CD$
                                                    :'Send command
                                                    :'Read data
           LINE INPUT #1,RD$
1440
           IF RD$="E20" OR RD$="E2" OR RD$="E" THEN LINE INPUT #1,RD$
1450
           IF LEFT$(RD$,1)<>"E" AND LEN(RD$)<13 THEN GOTO 1440
1460
         CLOSE #1
1470
         GOSUB 2100
                                                    :'Error check
1480
     GOTO 1240
                                                    :'Return to command select
1490
1500 '
1510 '#####
                                   #####
                Measure
1520
1530
       PRINT
       PRINT " Hit space key again to stop measurement " : PRINT
1540
       SD$ = "HO"
1550
                                                    :'Hold off
       OPEN "COM1:9600,E,7,2,CS,DS" AS #1
1560
1570
         PRINT #1,SD$
                                                    :'Send command
         LINE INPUT #1,RD$
1580
         A$ = INKEY$
IF A$ = " " THEN CLOSE #1:GOTO 1240
1590
                                                    :'Return to operation select
1600
         LINE INPUT #1,RD$
                                                    :'Read data
1610
                                                    :'Error check
           GOSUB 2100
1620
                                                    :'Return to operation select
1630
         IF ERRFLG = 1 THEN 1240
                                                    :'Display data
1640
         PRINT RD$
1650
       GOTO 1590
1660
```

```
1670 '#####
                 Quit
                                   #####
1680 '
          SD$ = "F0"
1690
                                                      :'Remote off
1700
          GOSUB 2030
                                                      :'Send command
          PRINT: PRINT " COMMUNICATION ENDED!!
1710
     END
1720
1730
1740 '#####
                 Command check
                                   #####
1750 '
       OPEN "COM1:9600,E,7,2,CS,DS" AS #1
1760
1770
          PRINT #1, "Z"
                                                      : 'Send command
          LINE INPUT #1,RD$
1780
                                                      :'Read data
          IF LEFT$(RD$,1) <> "M" THEN GOTO 1780
1790
1800
       IF CD$ = "Z" THEN PRINT : PRINT RD$ : RETURN
1810
1820
                                                      : 'Check number of probe
          IF MID$(RD$,105,1)<>" " THEN OPNUM=5 : GOTO 1870
1830
          IF MID$(RD$,104,1)<>" " THEN OPNUM=4 : GOTO 1870
1840
          IF MID$(RD$,103,1)<>" " THEN OPNUM=3 : GOTO 1870
1850
          IF MID$(RD$,102,1)<>" "THEN OPNUM=2 ELSE OPNUM=1
1860
1870
1880
       OPEN "COM1:9600,E,7,2,CS,DS" AS #1
1890
          PRINT #1,CD$
                                                      : 'Send command
1900
          PRINT
1910
         FOR I=1 TO OPNUM
1920
           LINE INPUT #1,RD$
                                                      :'Read data
           IF LEN(RD$)<5 GOTO 1920
1930
1940
           GOSUB 2100
                                                      :'Error check
1950
           IF ERRFLG=1 THEN CLOSE #1 : RETURN
           IF LEFT$(RD$,1)<>"P" AND CD$="H1" THEN GOTO 1920
IF LEFT$(RD$,1)<>"C" AND LEFT$(CD$,1)="K" THEN GOTO 1920
1960
1970
1980
           PRINT RD$
                                                      :'Display data
       NEXT I
CLOSE #1
1990
2000
2010
     RETURN
2020 '
2030 '#####
                 Send command
                                    #####
2040 '
       OPEN "COM1:9600,E,7,2,CS,DS" FOR OUTPUT AS #1
2050
2060
         PRINT #1,SD$
2070
       CLOSE #1
     RETURN
2080
2090 '
2100 '
       #####
                 Error check #####
2110 '
2120
       ERRFLG = 0
                                                     :'Clear error flag
2130
       IF LEFT$(RD$,1)<>"E" THEN GOTO 2200
2140
         PRINT
         PRINT " Error occurred. "; RD$
IF RD$ = "E25" OR RD$ = "E26" OR RD$ = "E27" THEN RETURN 1670
2150
2160
         SD$ = "F1"
2170
                      : CLOSE #1
                                                     :'Remote on
2180
         GOSUB 2030
                                                      :'Send command
2190
        ERRFLG = 1
                                                      :'Set error flag
2200
      RETURN
```

GP-IB Data Communication

GP-IB data communication is available only when using the optional GP-IB Interface Board CA-A20.

The GP-IB (General-Purpose Interface Bus) standard is defined by IEEE Standard 488-1978 as a standard for interfacing measuring instruments and computers. In this system, a maximum of 15 instruments can be connected to the same bus. Data communication is in parallel form, allowing high-speed data transfer even for a large system.

The system is composed of a controller (computer), talker devices, and listener devices. Each device is assigned an address from 0 to 30. The controller is assigned one talker address and one or more listener addresses. Communication is then carried out between one talker and at least one listener.

The GP-IB bus structure consists of a data bus (eight signal lines), a data byte transfer control bus (three signal lines), and a general interface management bus (5 signal lines). The signal lines of the data byte transfer control bus and general interface management bus are shown below.

Data byte transfer control bus:

DAV Data Valid; indicates condition (availability and validity) of information on the data bus.

NRFD Not Ready For Data; indicates condition of readiness of device(s) to accept data.

NDAC Not Data Accepted; indicates condition of acceptance of data by device(s).

General interface management bus:

ATN Attention; specifies how data on the data bus are to be interpreted and which devices must respond to data.

IFC Interface Clear; places the interface system in a known guiescent state.


SRQ Service Request; indicates need for attention and requests interruption of current sequence of events.

REN Remote Enable; enables or disables one or more local controls that have corresponding remote

End or Identify; indicates the end of a multiple-byte transfer sequence or, when used by the controller (computer) in conjunction with ATN, executes polling sequence.

Block Diagram of GP-IB System

EOI

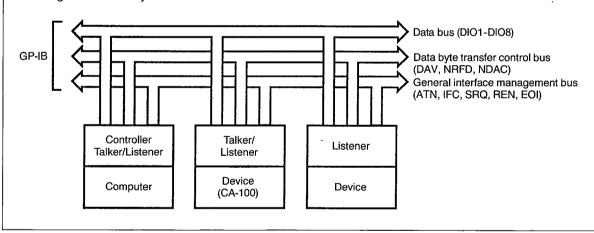

INTERFACE METHOD

Specifications:

Total cable length:

Inter-device cable length:

Maximum number of connected devices:

Data communication method:

Logic:

Within 20m (65.6 ft.)

Within 2m (6.6 ft)/connected device

15


8-bit parallel with 3-line handshake

Negative logic; signal levels: True (low): 0.8V or less

False (high): 2.0V or nore

Maximum communication rate: 1Mb/s

Pin Diagram

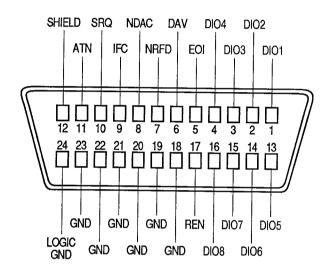


Communication Code Used: ASCII code

Interface Functions


chace i c				
Code	Function			
SH1	Source Handshake; all functions			
AH1	Accepter Handshake; all functions			
T6	Basic talker function; serial poll function; unaddress if MLA (My Listen Address); no talk only function			
L4	Basic listener function; unaddress if MTA (My Talk Address); no listen only mode			
SR1	Service request function			
RL2	Remote local function; no local lockout function			
PP0	No parallel poll function			
DC1	Device clear; all functions			
DT0	No device trigger function			
C0	No controller function			
E2	Use tri-state driver			

INSTALLING OPTIONAL GP-IB INTERFACE BOARD CA-A20


- Do not touch the gold contacts or any of the components on the GP-IB Interface Board. If the contacts become dirty, wipe them with a soft dry cloth.
- When the GP-IB Interface Board has been installed, it is not possible to perform data communication via the RS-232C terminal.
- 1. Set POWER switch to OFF.
- Disconnect the AC power cord from the AC wall outlet. Pull on the plug, not on the cord.
- Using a Phillips (cross-point) screwdriver, remove the two screws of the cover of the interface-board slot by turning them counterclockwise, and then remove the cover.




4. Align the edges of the GP-IB Interface Board with the grooves in the guide rails on each side of the interface-board slot and slide the GP-IB Interface Board fully into the slot in a straight line. Check that the board is firmly in place.

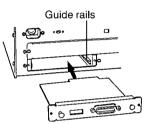

5. Insert one screw in the hole on each side of the GP-IB Interface Board and tighten until snug.



To remove the GP-IB Interface Board, switch off the power and unplug the AC power cord, remove the two screws holding the GP-IB Interface Board in place, grasp the handpulls of the GP-IB Interface Board, and pull the board out of the slot in a straight line. After removing the GP-IB Interface Board, be sure to replace the cover of the interface-board slot.

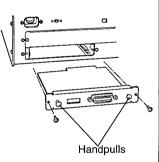

NOTES ON CONNECTING CA-100 TO GP-IB SYSTEM

- Before connecting or disconnecting the CA-100 from the GP-IB system, check that the POWER switch of the CA-100 is at **OFF** and that the power to other devices in the GP-IB system is also switched off.
- Obey the specifications of the GP-IB system regarding inter-device and total cable length. (See p. 57.)
- Set the POWER switch of the CA-100 to ON before switching on the computer. When switching off the system, switch off the computer before setting the POWER switch of the CA-100 to OFF.


NOTES ON USING GP-IB SYSTEM

- If data communication via the GP-IB system will not be performed with a device, disconnect that device from the system.
- Do not disconnect devices or switch power on or off while data communication is in progress.
- If a problem occurs which may be due to any of the above actions, reset the entire system to attempt to correct the problem.

SETTING ADDRESS


Address DIP switches

In order to use the CA-100 as part of a GP-IB system, it is necessary to set the address of the GP-IB board. The address is set using the address DIP switches on the back of the GP-IB board.



Address is set using these five switches.

The address is set in binary using the first five DIP switches from the right (from the LSB side). In the GP-IB system, acceptable addresses are from 0 to 30. At the time of shipment, the address is set to 0. To change the address, set POWER switch to **OFF**, change switch settings, and set POWER switch back to **ON**. Some examples of the switch positions for different addresses are shown below.



- Do not set the address to 31 (all five switches at 1).
- The address cannot be changed while the CA-100 is switched on. Even if the positions of the address DIP switches are changed while the CA-100 is switched on, the address will not change and the address which was set at the time the POWER switch was set from **OFF** to **ON** will continue to be used.

COMMUNICATION PROCEDURE

Inputting Commands

In addition to the ASCII commands listed starting on page 67, the address commands (GTL and SDC) and universal commands (DCL, SPE, and SPD) can be used to control the CA-100 from the controller (computer).

Multiple commands can be input at one time by connecting the commands with the character "&". When commands are connected in this way, a command string of up to 250 characters (including & and delimiter code) can be created and input to the CA-100.

- When multiple-command strings are used, be sure to wait until all operations requested by the command string are completed before inputting another command.
- Any of three delimiter codes can be used after a command (when inputting single commands) or at the end of a
 command string (when inputting multiple commands connected by "&"): <CR> (carriage return), <LF> (line
 feed), or the combination of <CR> and <LF>.

To allow the controller (computer) to control the CA-100 via the GP-IB system, it is necessary to set the CA-100 to remote-control mode.

To set CA-100 to remote-control mode (REMOTE LED will light):

Set the REN signal of the GP-IB to true (low) and transmit the address of the CA-100 to designate the CA-100 as a listener.

• While the CA-100 is in remote-control mode, the CA-100 will not respond to any key except **REMOTE**.

To cancel remote-control mode, do one of the following:

- a. Press REMOTE again,
- b. Set the REN signal of the GP-IB to false (high), or
- c. Transmit the address command GTL

Service Request

Service request is an interrupt signal which can be output from the CA-100 to the controller (computer) to indicate a malfunction. When a malfunction occurs, the SQR signal becomes true (low).

Whether or not the service request is used or not can be selected by the user by inputting the following commands: Command Purpose

"Q0" Sets CA-100 to not use service request (SQR signal not output); set at time of shipment

"Q1" Sets CA-100 to use service request (SQR signal output)

If service request will be used, the SQR signal will be output if any of the following errors occur: E3, E4, E5, E10, E11, E13, E25, E26, or E27

After the SQR signal from the CA-100 becomes true (low), wait for the controller (computer) to perform a serial poll. (During this time, the REMOTE LED will be blinking.) While the controller is performing the serial poll, the CA-100 will be designated as a talker; whether or not the ATN signal has become false (high) will be checked, the SQR signal will be set to false (high), and the status byte will be sent to the controller.

Status byte

Bit number	Value	Explanation	
0	0	Not used	
1	0	Not used	
2	1	Error E25, E26, or E27 occurred	
	0	Error E25, E26, or E27 did not occur	
3	0	Not used	
4 -		Error E3, E4, or E5 occurred	
		Error E3, E4, or E5 did not occur	
_	1	Error E10, E11, or E13 occurred	
5	5 0 Error E10, E11, or E13 did not occur		
6	1 Service request situation		
0 Not service request situation		Not service request situation	
7	0	Not used	

After this, the CA-100 will again be designated as a talker and the error message will be sent to the controller (computer).

- If the error is E3, E4, E5, E10, E11, or E13, remote-control mode will be canceled after the error message has been output.
- While the REMOTE LED is blinking, the data shown in the displays will not be correct.
- Blinking REMOTE LED can be canceled if pressed REMOTE key.

Outputting Data

The CA-100 can output the following four kinds of information to the controller (computer) when the CA-100 is set to remote-control mode:

a. Measurement data:

Output after each measurement

b. Error messages:

Output when a malfunction occurs with CA-100; depending on error, remote-

control mode may be canceled.

c. Data recalled from memory: Output when the command "Kxx" (xx is the memory channel number from which

data is desired) is input from the controller (computer).

d. Status information:

Output when the command "Z" is input from the controller (computer).

• The delimiter which will be used by the CA-100 for data output can be selected using the commands below:

"D0": Sets < CR > (carriage return) and < LF > (line feed) as the delimiter; set at time of shipment

"D1": Sets < LF > as the delimiter

 If measurement data are not accepted by the controller (computer) within 0.5 seconds from the time preparation of the measurement data set has been completed, the measurement data will be discarded and the preparations for the next measurement data will begin. To signal that data can be accepted by the controller, set the CA-100 to talker by setting the GP-IB data byte transfer control lines as follows:

DAV: False (high) NRFD: True (low) NDAC: True (low)

- Data output will be interrupted and the delimiter will be output in the following situations:
 - a. A command was accepted in the middle of data output.
 - b. An operation was started using one of the CA-100's keys or switches.
- If the CA-100 will not be controlled by the controller (computer), it is recommended that the remote-control mode of the CA-100 is not set. If the remote-control mode is set but the controller is not ready to accept data, the time for one measurement becomes longer (by 0.5 seconds for each measuring probe being used) than the time required if remote-control mode is canceled.

Operation During Data Communication

Immediately after POWER switch is set to **ON** but before zero calibration has been performed, no measurements can be taken and thus no measurement data will be output. However, the following information can be output:

- a. Data recalled from memory using the command "Kxx" (xx is the memory channel from which data is requested).
- b. Status information requested using the command "Z"
- c. Error messages related to input commands ("E4", "E10" or "E11")
- d. Error messages related to performing zero calibration ("E21", "E29", or "E30")
- e. Error messages relating to connections ("E25", "E26", or "E27")

Display hold

Display hold can be set by inputting the command "H1" from the controller (computer). When display hold is set, the displayed data will not change and data output is only performed once for the data which was measured just before the command was input.

- If the command is input when no measurement data is present, the error code "E10" (command error) will be output. Measurement data will not be present in the following circumstances:
 - a. After POWER switch is set to **ON** but before zero calibration is performed.
 - b. After zero calibration has been performed but before any measurements have been taken.
 - c. When the error message "NO SYNC. SIGNAL" is shown in the liquid crystal display.
- If the measurement data output when display hold is set is not accepted within 0.5 seconds, the measurement data will be discarded and the held measurement data cannot be output.
- While display hold is set, measurement data is not output. However, if measurement conditions are changed by
 inputting commands from the controller (computer), the new measurement data (recalculated according to the
 new measurement conditions) will be output.
- Even while display hold is set, the following information can be output:
 - a. Data recalled from memory using the command "Kxx" (xx is the memory channel from which data is requested).
 - b. Status information requested using the command "Z"
- c. Error messages related to input commands ("E3", "E4", "E5", "E10", "E11", or "E13")
- If the command "I" is input while display hold is set, zero calibration will be performed and display hold will be canceled.

To cancel display hold, input the command "H0" from the controller (computer).

Sample Program

The sample program listed on the following pages is intended for use with an IBM personal computer in which the IBM GPIB Adapter (GPIB interface board) has been installed. For more detailed information, refer to IBM's <u>Guide to the</u> General Purpose Interface Bus Adapter Programming Support.

Sample Program

```
1000 CLEAR ,58002!
                                                             :' **** = (Free bytes) -2223
1010 IBINIT1 = 58002!
                                                             :'Bload area
1020 \text{ IBINIT2} = \text{IBINIT1} + 3
1030 BLOAD "A:BIB.M", IBINIT1
                                                             :'GPIB control routine
                                                     ' Set up function routine address
1040
1050 CALL IBINIT1(IBFIND, IBSTOP, IBTRG, IBCLR, IBPCT, IBSIC, IBLOC, IBPPC, IBBNA, IBONL,
IBRSC, IBSRE, IBRSV, IBPAD, IBSAD, IBIST, IBDMA, IBEOS, IBTMO, IBEOT)
1060 CALL IBINIT2(IBGTS, IBCAC, IBWAIT, IBPOKE, IBWRTF, IBWRTA, IBWRT, IBCMDA, IBCMD, IBR
DF, IBRDA, IBRD, IBRPP, IBRSP, IBDIAG, IBXTRC, IBSTA%, IBERR%, IBCNT%)
1080 CLS
1090 PRINT "
                      CA-100 GPIB COMMUNICATION PROGRAM " : PRINT
1100 DEV$="DEV6"
                                                             :'Device name (CA-100)
1110 ADP$="GPIBO"
                                                             : 'GPIB interface
                                                             :'Get device
1120 CALL IBFIND(DEV$, DEV%)
1130
         IF DEV%<0 THEN GOTO 2260
                                                             :'GPIB error
1140 CALL IBFIND(ADP$, ADP%)
                                                             :'Get adapter
        IF ADP%<0 THEN GOTO 2260
1150
                                                             :'GPIB error
1160 CALL IBSIC(ADP%)
                                                            :'Send interface clear
1170 V%=1 : CALL IBSRE(ADP%,V%)
1180    LF$=CHR$(&HA)
1190    PRINT " CA-100 address = 6 " : PRINT
                                                             :'Set remote enable line
                                                             :'Line feed code
1200 RD0$=SPACE$( 135 )
1210 '
                                                             :'Read data buffer
1220 '#####
                   CA-100 set up
                                         #####
1230
1240 WRT$="D1" : GOSUB 2000
1250 WRT$="Q0" : GOSUB 2000
                                                             :'Delimiter = LF
                                                             :'Disable service requests
1260
      '#####
1270
                   CA-100 0-calibration
                                                 #####
1280
1290 PRINT " Darken probe then press any key to perform "
        A$ = INKEY$
1300
        IF A$ ="" THEN GOTO 1300
WRT$ = "I" : GOSUB 2000
1310
1320
                                                             :'0-CAL
        GOSUB 2080
1330
        IF RD$ <> "E21" GOTO 1380
1340
        IF RD$ <> "E21" GOTO 1380 : 'Return to operation select PRINT : PRINT " Too Bright" : PRINT " Darken probe " : PRINT
1350
1360 GOTO 1290
1370
1380
      '#####
                                              #####
                 Select operation
1390
1400
1410
         PRINT
         PRINT "
1420
                                                          " : PRINT
                     Select operation
         PRINT "
                        Read data ---> Space key "
1430
         PRINT "
1440
                        Send command ---> C
         PRINT "
1450
                                                          " : PRINT
                        Quit
1460
        A$ = INKEY$
          IF A$="C" OR A$="c" THEN GOTO 1520
IF A$=" " THEN GOTO 1640
1470
                                                            :'Send command
1480
                                                            :'Read data
           IF A$="Q" OR A$="q" THEN GOTO 1750
1490
                                                            :'Quit
1500
        GOTO 1460
1510
     '#####
1520
                   Send command
                                        #####
1530
1540
        INPUT "Enter command: ",SD$
1550
          PRINT
           IF LEFT\$(SD\$,1) = "K"
                             ="Z" THEN GOTO 1820
="H1" THEN GOTO 1820
="H1" THEN GOTO 1820
="I" THEN GOTO 1820
1560
                                     THEN GOTO 1820
                                                            : 'Check command
1570
           IF SD$
          IF SD$
1580
          IF SD$
1590
1600
          WRT$=SD$ : GOSUB 2000
                                                            :'Send command
1610
          GOSUB 2080
1620
       GOTO 1410
1630 '
1640 '#####
                   Read data
                                    #####
1650 '
```

```
PRINT " Hit space key again to stop measurement " : PRINT
1660
        WRT$="H0" : GOSUB 2000
1670
1680
        A$=INKEY$
          IF A$ =" " THEN 1410
1690
                                                             :'Return to command select
1700
        GOSUB 2080
                                                             :'Return to command select
1710
          IF ERRFLG=1 THEN 1410
                                                             :'Display data
1720
        PRINT RD$
1730
      GOTO 1680
1740
                              #####
1750 '#####
                   Quit
1760
1770
       CALL IBLOC(DEV%)
       IF IBSTA% < 0 THEN GOTO 2260
PRINT " COMMUNICATION ENDED !! "
                                                            :'Status check
1780
1790
1800
      END
1810
                   Check command
                                        #####
1820
      '#####
1830
       WRT$="Z" : GOSUB 2000
1840
                                                             :'Status read
        GOSUB 2080
1850
        GOSOB 2000
IF SD$="Z" THEN PRINT RD$ : GOTO 1980
IF LEN(RD$)=101 OR MID$(RD$,102,1)=" " THEN OPNUM=1 : GOTO 1910
1860
1870
        IF LEN(RD$)=102 OR MID$(RD$,103,1)=" " THEN OPNUM=2 : GOTO 1910
1880
        IF LEN(RD$)=103 OR MID$(RD$,104,1)=" "THEN OPNUM=3 : GOTO 1910

IF LEN(RD$)=104 OR MID$(RD$,105,1)=" "THEN OPNUM=4 ELSE OPNUM=5
1890
1900
1910
        WRT$=SD$ : GOSUB 2000
FOR I=1 TO OPNUM
GOSUB 2080
                                                             :'Send command "H1" or "K**"
1920
1930
1940
           IF ERRFLG=1 THEN 1980
1950
1960
          PRINT RD$
1970
        NEXT I
1980
        GOTO 1410
1990
2000 '#####
                   Write command to CA-100
                                                   #####
2010 '
        WRT$ = WRT$ + LF$ : LIS$ = "?@&"
2020
        CALL IBCMD(ADP%, LIS$)
2030
                                                             :'Send command
                                                             :'Send command
        CALL IBWRT (ADP%, WRT$)
2040
            IF IBSTA% < 0 THEN GOTO 2260
                                                             :'Status check
2050
      RETURN
2060
2070
2080 '#####
                   Read data from CA-100
                                                   #####
2090 '
                 TAK$ = "?F"
2100
        CALL IBCMD (ADP%, TAK$)
2110
        CALL IBRD (ADP%, RDO$)
2120
            IF IBSTA%<0 THEN GOTO 2260
                                                             :'Status check
2130
        J=INSTR(RDO\$,CHR\$(10))
                                                             :'Read data
2140
        RD\$=LEFT\$(RD0\$,J-1)
2150
        ERRFLG=0
                                                             :'Error flag clear
2160
2170
        IF LEFT$(RD$,1)<>"E" THEN GOTO 2240
2180
        ERRFLG=1
2190
        PRINT " Error occurred : ";RD$
        IF RD$="E25" OR RD$="E26" OR RD$="E27" THEN GOTO 1750
2200
        CALL IBSIC(ADP%)
2210
        V%=1 : CALL IBSRE(ADP%, V%)
2220
2230
        CALL IBCMD(ADP%, LIS$)
2240
        RETURN
2250
2260 '#####
                   GPIB error
                                      #####
2270
        PRINT " GPIB error !! "
PRINT "ibsta%= "; HEX$(IBSTA%)
PRINT "iberr%= "; HEX$(IBERR%)
PRINT " adp%= "; HEX$(ADP%)
PRINT " dev%= "; HEX$(DEV%)
2280
2290
2300
2310
2320
        GOTO 1750
                                                             :'Quit
2330
```

Communication Format

COMMANDS

The commands listed in the following tables can be used to control the CA-100. Most of the commands listed are applicable to data communication with both RS-232C and GP-IB systems; those that are applicable to only one system are indicated as such.

Command	Function	Input format	Further information
I	Performs zero calibration	(1)	 Block all light from reaching the receptor area of measuring probes before inputting this command. Until this command is input and zero calibration is completed, the commands U, A, N, J, and E will not be accepted. (Do not string the command I together with other commands using "&".) Corresponds to pressing 0-CAL.
М	Selects display mode	"M0": Sets xyY display mode"M1": Sets T△uvY display mode"M2": Sets analyzer (RBG) display mode(if optional Analyzer Card inserted)	Corresponds to pressing MODE.
S	Selects SYNC mode	"S0": Sets NTSC SYNC mode "S1": Sets PAL SYNC mode "S2": Sets EXT SYNC mode "S3": Sets UNIV. SYNC mode	Corresponds to pressing SYNC.
Н	Sets/cancels display hold	"H0": Cancels display hold "H1": Sets display hold	Corresponds to pressing HOLD.
U	Setting user- selected calibra- tion data or standard color data (for memory channel 00)	"U [x value]: y value]: Y value]" • x value or y value can be input in any of the three formats given in the examples below for inputting the value 0.330: "0.330" "330" Spaces must not be input before or after data. • Y value Acceptable range: 0.01 to 999 Number of characters: Up to 4 (including decimal point) Spaces must not be input before or after data.	 Corresponds to pressing CAL in xyY or T∆uvY display mode. Cannot be used in analyzer mode (even with optional Analyzer Card inserted). Although ENTER would be pressed to complete input of data if the operation were performed using the CA-100's keys, pressing ENTER or inputting the corresponding command "E" is not necessary. If "E" is input, the CA-100 will store the present measured data as the standard color data. This command will not be accepted unless "I" has been input and zero calibration has been completed.

Command	Function	Input format	Further information
A	Sets range of analog display	a. In xyY or T∆uvY display mode: "A [range of ∆x, ∆y]: range of ∆Y]" b. In analyzer mode, G standard: "A [range of ∆G]: range of R/G, B/G]]" c. In analyzer mode, R standard: "A range of △R: range of G/R, B/R]" Acceptable range: 0.1 to 99 Number of characters: Up to 3 (including decimal point) Spaces must not be input before or after data.	Corresponds to pressing RANGE. Although ENTER would be pressed to complete input of data if the operation were performed using the CA-100's keys, pressing ENTER or inputting the corresponding command "E" is not necessary. If "E" is input, the CA-100 will store the present measured data as the standard color data. This command will not be accepted unless "I" has been input and zero calibration has been completed. Range data remains in memory even if CA-100 is switched off.
С	Sets memory channel	"C memory channel number" Acceptable range: 00 to 10 (If optional Card inserted, acceptable range becomes 00 to 99.)	Corresponds to pressing MEMORY CH ☐ or ☐.
N	Inputs ID label	"N memory channel number [10-character ID label] " or "N [10-character ID label] " Acceptable range of memory channel number: 00 to 10 (If optional Card inserted, acceptable range becomes 00 to 99.)	 If memory channel number is omitted, memory channel presently being used will be set. Corresponds to pressing ID. Although ENTER would be pressed to complete input of data if the operation were performed using the CA-100's keys, pressing ENTER or inputting the corresponding command "E" is not necessary. If "E" is input, the CA-100 will store the present measured data as the standard color data. This command will not be accepted unless "I" has been input and zero calibration has been completed. ID label will remain in memory even if CA-100 is switched off.
Р	Sets probe connector number for which data will be displayed	When using Multi-Probe Expansion Board CA-A13 only: "probe connector number" Acceptable range: 1 to 5	 Probe connector number to which no probe is connected cannot be selected. Corresponds to pressing PROBE.

Command	Function	Input format	Further information
0	Sets probe connector number for which data will be output	When using Multi-Probe Expansion Board CA-A13 only: "O probe connector number" Acceptable range: 0 to 5 If data output for more than one probe connector is desired, more than one probe connector number can be input. For example, "O134" will cause data from measuring probes connected to probe connectors 1, 3, and 4 to be output. For data output from measuring probes connected to all probe connectors, input 0 as the probe connector number: "O0"	 Probe connector number to which no probe is connected cannot be selected. The presently selected probe connector number for data output can be determined by using the command "Z" (status information request). If probe connector number for which data will be output is not selected after POWER switch is first set to ON, the probe connector number for data output will be the same as the probe connector number for which data will be displayed.
L	Sets presently selected settings as default settings	"L"	 Changes the default settings (settings which are automatically set when POWER is first set to ON) for the following items: a. Display mode b. SYNC mode c. Memory channel d. Probe connector for which data will be displayed (only when using optional Multi-Probe Expansion Board CA-A13) Corresponds to pressing PROBE while CURSOR ▶ is held pressed.
J	Sets calibration mode when CA-100 is set to analyzer (RBG) display mode (available only with an optional Analyzer Card)	When using optional Analyzer Card only: "J0": Calibration mode off "J1": Calibration mode on • Calibration mode is the mode which the CA-100 enters when CAL is pressed.	 If the command "J0" (calibration mode off) is input after RBGW data has been set but before the command "E" (ENTER) is input, the RBGW data just set will be deleted. If the command I, M, A, C, N, or P is input, calibration mode will automatically be canceled. Corresponds to pressing CAL when CA-100 is in analyzer mode. This command will not be accepted unless "I" has been input and zero calibration has been completed.
	For input of RGB emission characteristics for CRT phosphors [available only in analyzer (RBG) display mode when using optional Analyzer Card]	When using optional Analyzer Card only: "R": Sets R emission value "B": Sets B emission value "G": Sets G emission value "W": Sets W (standard white value)	Will be accepted only when calibration mode has been set (by pressing CAL or by inputting the command "J1"). Correspond to pressing 4, 1, 0, and 7 respectively after CAL has been pressed in analyzer mode.

Command	Function	Input format	Further information
E	ENTER	"E"	Sets present displayed data as standard color data in xyY or T△uvY display modes (or in analyzer mode if calibration mode is off). Stores previously set RBGW values in memory when calibration mode is switched on (if RBGW values have all been set correctly). Corresponds to pressing ENTER This command will not be accepted unless "I" has been input and zero calibration has been completed.
К	Recalls standard color data from memory	"K memory channel number" Acceptable range: 00 to 10 (If optional Card inserted, acceptable range becomes 00 to 99.)	 Standard color data is output for all probe connector numbers selected for data output. For format of output data, see p. 74. The data output as a result of this command must be accepted before the next command is input.
Z	Requests status information regarding present settings	"Z"	The following status information will be output: a. Display mode b. SYNC mode c. Memory channel number d. ID label e. Analog display range f. Luminance units g. Probe connector number for which data is displayed h. Probe connector number (or numbers) for which data is output i. Calibration mode on or off j. RBGW values set or not For format of output data, see p. 75. The data output as a result of this command must be accepted before the next command is input.

For data communication via RS-232C terminal only:

To add sommer sales varies as a second some some			
Command	Function	Input format	Further information
F	Sets remote- control mode off or on	"F0": Remote-control mode off "F1": Remote-control mode on	If remote-control mode is set to off, the only acceptable input via the RS-232C terminal is the command "F1".

For data communication using GP-IB system only: (Available only when optional GP-IB Interface Board has been installed)

Command	Function	Input format	Further information
Q	Activates or inactivates service request function	"Q0": Service request inactive "Q1": Service request active	This setting will be stored in the memory of the CA-100 and will remain in memory until changed by the user, even if the POWER switch is set to OFF.
D	Sets delimiter for data output	"D0": Delimiter is <cr> and <lf> "D1": Delimiter is <lf></lf></lf></cr>	 The selected delimiter is added to data output by the CA-100. The delimiter used for input to the CA-100 can be <cr> (carriage return), <lf> (line feed), or the combination of <cr> and <lf>.</lf></cr></lf></cr> This setting will be stored in the memory of the CA-100 and will remain in memory until changed by the user, even if the POWER switch is set to OFF.

OUTPUT DATA

Measurement Data

Measurement data is output by the CA-100 according to the present display mode. However, the format of the output data will be slightly different from the format of the displayed data.

- When using the optional Multi-Probe Expansion Board CA-A13, the probe connector number for which data will be output should be selected using the command:

 "Of the latest and the command of the co
 - "O probe connector number '

• In the following, "_" indicates a space.

Display mode: xyY

Format: probe connector number ___ x value ; y value ; Y value delimiter

Example: P1 __ 310;330; __ 150 delimiter

Probe connector number: Value from 1 to 5; probe connector number for which data is being output. In example,

data is being output for probe connector P1.

x value, y value: First three decimal places output. In example, x = 0.310 and y = 0.330.

Y value: Up to four characters output; if value consists of fewer than four characters, value will

be preceded by the required number of spaces. In example, Y = 150.

Display mode: T∆uvY

Format: P probe connector number _ T value; \(\Delta uv value \); Y value delimiter

Example: P1 ___ 6500; __ 005; __ 150 delimiter

Probe connector number: Value from 1 to 5; probe connector number for which data is being output. In example,

data is being output for probe connector P1.

T value: Up to five characters output; if value consists of fewer than five characters, value will

be preceded by the required number of spaces. In example, T = 6500.

△uv value: First three decimal places output; preceded by a space if positive or "-" if negative.

In example, $\triangle uv = +0.005$.

Y value: Up to four characters output; if value consists of fewer than four characters, value will

be preceded by the required number of spaces. In example, Y = 150.

Display mode: Analyzer (RBG)

• Analyzer (RBG) display mode is available only with an optional Analyzer Card.

Format: P probe connector number R value; B value; G value delimiter

Example: P1 ____ 101; __ 99.0; ___ 114 delimiter

Probe connector number: Value from 1 to 5; probe connector number for which data is being output. In example,

data is being output for probe connector P1.

R value, B value, G value: Up to five characters output; if value consists of fewer than five characters, value will be preceded by the required number of spaces. In example, R = 101, B = 99.0, and G = 114.

When using optional Multi-Probe Expansion Card CA-A13: When using Multi-Probe Expansion Card CA-A13, data output for more than one probe connector number can be selected if desired. If more than one probe connector number is selected, data will be output consecutively for all selected probe connector numbers in numerical order.
Format: P probe connector number measurement data* delimiter P probe connector number measurement data* delimiter
P probe connector number measurement data* delimiter • Measurement data is output according to the format above for the selected display mode.

Data Recalled From Memory

Standard color data in memory can be recalled and output using the command "Kxx", where xx is the memory channel number from which data is desired. The data which will be recalled and output depends on the present display mode.

- When using the optional Multi-Probe Expansion Board CA-A13, the probe connector number for which data will be output should be selected using the command:
 - "O probe connector number".

• In the following, "__" indicates a space.

Format: CH memory channel number P probe connector number serial number (a) Standard color data delimiter

Memory channel number: Value from 00 to 99; memory channel number from which data is being recalled and

output.

Probe connector number: Value from 1 to 5; probe connector number for which data is being output.

Serial number (a): 8 characters;

For xyY or T∆uvY display mode:

Serial number of probe used for calibration to a user-selected reference.

For analyzer (RBG) display mode:

Serial number of probe used for setting RGB emission characteristics of CRT

phosphors.

Serial number (b): 8 characters; serial number of probe used for setting standard color data.

Standard color data: For xyY or T∆uvY display mode:

Format: x value ; y value ; Y value

x, y values: First three decimal places output.

Y value: Up to four characters output; if value consists of fewer than four

characters, value will be preceded by the required number of spaces.

For analyzer (RBG) display mode:

Format: R value; B value; G value

R, B, G values: Up to five characters output; if value consists of fewer than five characters, value will be preceded by the required number of spaces.

When using optional Multi-Probe Expansion Card CA-A13:

When using Multi-Probe Expansion Card CA-A13, data output for more than one probe connector number can be selected if desired. If more than one probe connector number is selected, data will be output consecutively for all selected probe connector numbers in numerical order.

Format: CH memory channel number P probe connector number [serial number (a)] [serial number (b)] _ standard color data* delimiter

CH memory channel number P probe connector number [serial number (a)]

[serial number (b)] _ standard color data* delimiter

CH memory channel number P probe connector number [serial number (a)]


[serial number (b)] measurement data* | delimiter

• Standard color data is output according to the format above for the selected display mode.

Status Information

Inputting the command "Z" will cause the present settings and status of the CA-100 to be output as a 134-character word as shown below.

• In the following, "__" indicates a space.



Content	Number of characters	Format
Display mode	13	MODE: x y Y (For xyY display mode) MODE: T d u v Y (For T△uvY display mode) MODE: RGB (For analyzer (RBG) display mode) In example, display mode is set to analyzer (RBG) display mode.
SYNC mode	12	SYNC: NTSC (For NTSC mode) SYNC: PAL (For PAL mode) SYNC: EXT (For EXT mode) SYNC: UNIV (For UNIV. mode) In example, SYNC mode is set to NTSC.
Memory channel number and ID label	19	CH memory channel number [ID label] Memory channel number: Two characters ID label: Ten characters In example, memory channel 01 is selected and ID label is "MINOLTA".
Analog display range	24	RANGE_xy: range %_Y: range %_ (For xyY or T \(\triangle\) wy display mode) RANGE_G: range %_RB: range %_ (For analyzer (RBG) display mode; G standard) RANGE_R: range %_GB: range %_ (For analyzer (RBG) display mode; R standard) Range: Three characters; if actual value fewer than three characters, value will be preceded by required number of spaces. In example, analog display range for R is set to 1.0% and the range for B and G is set to 2.0%.
Luminance unit	15	LUMI.: cd/m*m (For cd/m²) LUMI.: f L (For fL) In the example, the luminance unit is fL.
Probe connector number for display	11	D I S P - P: probe connector number for display Probe connector number for display: One character; 1 to 5 In example, probe connector number P1 was selected for display.
Probe connector number for output	14	OUT - P: probe connector number for output Probe connector numbers for output: Up to five characters; 1 to 5; if fewer than five characters, remaining characters will be spaces. In example, probe connector numbers P1, P3, and P5 were selected for output.

Content	Number of characters	Format
Calibration mode on/off in analyzer (RBG) display mode*	10	CAL: 0N (If calibration mode on) CAL: 0FF (If calibration mode off) In example, calibration mode for analyzer mode is on.
WRBG values input status**	16	W: #_R: #_G: #_B: #_ #: * if value has already been input; _ if value has not been input yet In example, values for W, R, and B have been input but value for G has not been input yet.

^{*}Calibration mode on/off in analyzer (RBG) display mode will be output only when analyzer (RBG) display mode is set.
**WRBG values input status will be output only when calibration mode is on in analyzer (RBG) display mode.

Error Messages

Error messages which may be output by the CA-100 when remote-control mode has been set are listed below.

• For information on error messages which may appear in the liquid crystal display, see p. 89.

- In the following, "__" indicates a space.

Error magaga format	Evalenation
Error message format	Explanation
* Measurement data P	Present measuring probe and measuring probe used for calibration to a user-selected reference or for setting standard color (or for inputting RGB emission characteristics of CRT phosphors in analyzer mode) are different. (Liquid crystal display error message: E1)
* Measurement data T	Ambient temperature has changed since zero calibration was performed. (Liquid crystal display error message: E2)
* Measurement data F	Measured data is outside of measuring range. (Digital display blinking)
E3, command which caused error (up to 20 characters)	Error in setting calibration values for user-selected reference. Remote-control mode canceled; new or additional commands not accepted.
E4; command which caused error (up to 20 characters)	0% was set as analog display range. Remote-control mode canceled; new or additional commands not accepted.
E5; command which caused error (up to 20 characters)	The command "E" was input before acceptable data was input for all four values (R, G, B, and W) when inputting RGB emission characteristics for CRT phosphors. Remote-control mode canceled; new or additional commands not accepted.
E10 ; command which caused error (up to 20 characters)	The input command is not acceptable. Remote-control mode canceled; new or additional commands not accepted.
E11	A command string of more than 250 characters was input. Remote-control mode canceled; new or additional commands not accepted.
E12	Error in RS-232C data communication. A command was input while CA-100 was unable to accept commands. Remote-control mode canceled; new or additional commands not accepted.
E13	The command "E" was input to input the standard color (W) while "OVER" was displayed in the liquid crystal display. Remote-control mode canceled; new or additional commands not accepted.
E20	Liquid crystal display error message: NO SYNC. SIGNAL
E21	Liquid crystal display error message: TOO BRIGHT

	Error message format	Explanation
	P probe connector number (1 to 5) _ E22	Liquid crystal display error message: OVER
	P [probe connector number (1 to 5)] E23	Liquid crystal display error message: OFFSET ERROR PUSH 0-CAL KEY
	P probe connector number (1 to 5) Luminance value Y (up to four characters)	Measured value is over display range in T∆uvY display mode.
**	E25	Liquid crystal display error message: SET MAIN PROBE
**	E26	Liquid crystal display error message: PROBE ERROR
**	E27	Liquid crystal display error message: MEMORY CARD ERROR
	P probe connector number E28	Liquid crystal display error message: DATA ERROR
	E29	Liquid crystal display error message: DARKEN PROBE
	E30	Liquid crystal display error message: DARKEN PROBE PUSH 0-CAL KEY

^{*}If the conditions for more than one of these error messages occur, the appropriate error messages will be strung together. For example, if the conditions for all three error messages occurred:

would be output as the error message.

Measurement data _ P _ T _ F

^{**}If the conditions for any of these messages occur, the appropriate error message will be output continuously as long as the power is on, and new or additional commands will not be accepted. If this occurs, switch power off and then switch it on again. (When performing RS-232C data communication, these messages will be output regardless of whether remote-control mode is on or off.)

MEASURING PRINCIPLE

General Information


A CRT screen is equipped with phosphors to emit red, green, and blue light. When the electron beam inside the CRT strikes these phosphors, the phosphors emit their respective colors, and these colors are combined on the CRT screen to form an image.

The CA-100 uses sensors filtered to closely match the CIE 1931 $\bar{x}_2\lambda$, $\bar{y}\lambda$, and $\bar{z}\lambda$ color-matching functions to measure the energy of the light emitted by the CRT phosphors. The measured values are then displayed as x, y, Y or T, Δ uv, Y values. (With an optional Analyzer Card, the measured values can be displayed in analyzer mode.)


Measurements are performed as follows:

- 1. The red, green, and blue light emitted by the CRT phosphors enters the receptor area of the measuring probe, passes through the spectral-response correction filters, and strikes the light sensors, which convert the light into currents proportional to the intensity of the light. These currents are then converted into proportional voltages. (Output values: X₂, Y, and Z)
- 2. At the same time, a temperature sensor outputs a current proportional to the temperature of the measuring probe. This current is then converted into a proportional voltage. (Output value: T)
- 3. The voltages obtained in step 1 (X_2 , Y, and Z) and the voltage obtained in step 2 (T) are passed through A-to-D (analog-to-digital) converters and are changed to digital signals. These A-to-D converters are controlled according to the selected SYNC mode to operate at the proper time for measurement.
- 4. The resulting digital values (count values) are sent to the CPU of the main unit. (If the Multi-Probe Expansion Board CA-A13 is installed, the digital values will be transferred from all connected measuring probes.) The CPU performs calculations according to the measuring conditions (display mode, SYNC mode, correction factors from calibration to a user-selected reference, etc.) set using the keys and switches.
- 5. The results of the calculations are shown in the displays and output via the RS-232C terminal. (If the optional GP-IB Interface Board CA-A20 is installed, the data is output according to the IEEE-488 standard via the GP-IB Interface Board instead of the RS-232C terminal.)

SPECTRAL SENSITIVITY

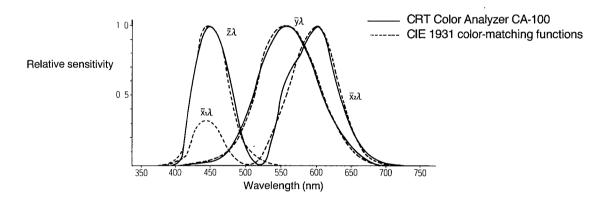

BLOCK DIAGRAM

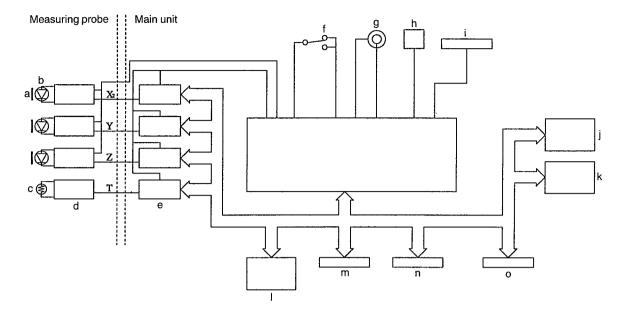

- a. Spectral-sensitivity correction filters
- b. Light sensors
- c. Temperature sensor
- d. Current-to-voltage converters e. A-to-D converters
- f. Luminance-unit selector switch
- g. EXT (V. SYNC) terminal h. Baud-rate selector DIP switches
- i. RS-232C terminal j. Displays

- k. Keys
 I. Internal memory
- m.Connector for optional card
- n. Connector for optional Multi-Probe Expansion Board CA-A13 o. Connector for optional GP-IB Interface Board CA-A20

xyY Display Mode

When xyY display mode is set on the main unit, the digital displays show the following values:

- x, y: Chromaticity coordinates of CIE 1931 color space

The values are calculated according to the following formulas:

$$X = \frac{X}{X + Y + 7}$$

$$y = \frac{Y}{X + Y + Z}$$

$$Y = Y$$

X, Y, Z = CIE tristimulus values

 X is determined from the measured X₂ value and the Z value as follows:

$$X = 0.1672Z + X_2 = X_1 + X_2$$

T△uvY Display Mode

When T\(\Delta\) uvY display mode is set on the main unit, the digital displays show the following values:

T: Correlated color temperature

△uv: Color difference from blackbody locus

Y: Luminance


In $T\triangle uvY$ display mode, color is indicated by correlated color temperature T and color difference from blackbody locus $\triangle uv$; luminance is indicated by Y.

RELATION BETWEEN T AND Auv

The color temperature of a light source is the temperature at which a blackbody (an ideal radiator) would emit light with the same chromaticity. The colors which can be indicated using color temperature are limited to those colors on the blackbody locus.

Correlated color temperature is used to apply the general idea of color temperature to those colors that are close to but not exactly on the blackbody locus. The correlated color temperature is determined by determining the isotemperature line on which the color of the light source is positioned. Isotemperature lines are straight lines for which all colors on the line appear visually equal; the correlated color temperature of any color on the isotemperature line is equal to the color temperature at the point where the isotemperature line intersects the blackbody locus.

Since all colors on an isotemperature line have the same correlated color temperature, it is necessary to also specify the difference from the blackbody locus \triangle uv to completely describe a color. A positive (+) value of \triangle uv indicates a color which is above the blackbody locus; a negative (-) value indicates a color which is below the blackbody locus.

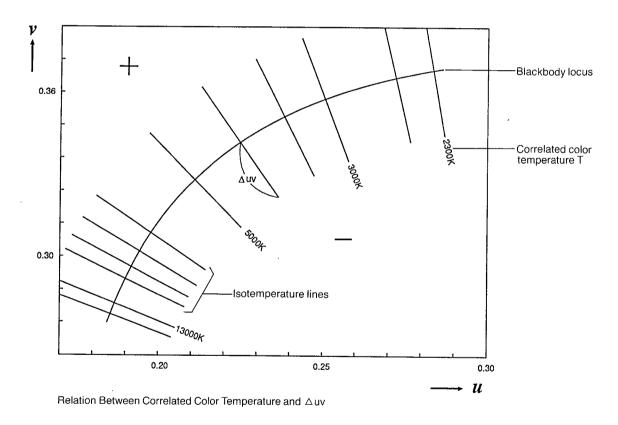

Calibration to a User-Selected Reference

Calibration to a user-selected reference is performed by measuring a color generated on a CRT and inputting the calibration values (x, y, Y) for the generated color into the CA-100. The CA-100 then determines the correction factors to be applied to the measured values in order to match the calibration values, and stores the correction factors in the selected memory channel.

At the time of shipment, all memory channels are set to Minolta's standard calibration values, and measurements can be taken immediately based on Minolta's standard. Calibration to a user-selected reference can be performed to determine the correction factors for the following situations:

- a. To correct for slight differences between the spectral sensitivities of the measuring probe's sensors and the CIE 1931 color-matching functions.
 - The measuring probe contains three sensors to measure the color on the CRT screen. The spectral sensitivities of these sensors are close to the CIE 1931 color-matching functions, but are not exactly the same. Because of this, the measured absolute values will be influenced by the slight differences between the spectral sensitivities of the sensors and the CIE 1931 color-matching functions, and will thus be slightly different than the true values based on the CIE 1931 color-matching functions. By generating a color with known values on a standard CRT and performing calibration to this reference color, the influence of the slight differences between spectral sensitivities of the measuring probe's sensors and the CIE 1931 color-matching functions can be effectively eliminated.
- b. To standardize the spectral response of several CA-100 units (or measuring probes when using the optional Multi-Probe Expansion Board CA-A13).
 - Even between different units of the same type of measuring probe, the spectral sensitivities of the sensors of the different units may vary slightly. Because of this, the displayed measurement values for different units may be slightly different even if the same CRT is measured. If calibration to a user-selected reference is performed for several units using the same CRT and calibration values, the influence of slight inter-instrument differences in spectral sensitivities can be effectively eliminated.

The correction factors α , β , and γ , which are stored in the selected memory channel of the CA-100 (but which cannot be directly recalled to the display) are calculated according to the following procedure.

a. The values (x₀, y₀, Y₀) measured based on Minolta's standard calibration are used to calculate the internal measured values 2, Y, and Z.

$$x_1 = \ \frac{1.1672x_0 + 0.1672y_0 - 0.1672}{y_0} \ Y_0$$

$$Z = \frac{1 - x_0 - y_0}{y_0} Y_0$$

b. The values of X_2 , Y_1 , and Z_2 and the calibration values for the user-selected reference (x_1, y_1, Y_1) are then used to calculate the correction factors α , β , and γ .

$$\alpha = \frac{1}{X_2} \quad \frac{1.1672x_1 + 0.1672y_1 - 0.1672}{y_1}$$

$$\beta = \frac{Y_1}{Y}$$

$$\gamma = \frac{1}{Z} \frac{1 - x_1 - y_1}{y_1} Y_1$$

The correction factors α , β , and γ are used to calculate internal corrected values X_2 , Y', and Z' as follows:

$$X_2' = \alpha X_2$$

$$Y' = \beta Y$$
$$Z' = \gamma Z$$

$$Z' = \sqrt{Z}$$

These internal corrected values (X2', Y', Z') are then used to calculate the displayed and output values (x, y, Y) as follows:

$$x = \frac{X_2' + 0.1672Z'}{X_2' + Y' + 1.1672Z'}$$

$$X_2' + Y' + 1.1672Z'$$

$$y = \frac{Y'}{X_2' + Y' + 1.1672Z'}$$

$$Y = Y'$$

Analyzer Mode

Inserting an optional Analyzer Card adds analyzer display mode to the CA-100.

In analyzer mode, the CA-100 displays the luminous intensities (brightnesses) of the monochromatic red, green, and blue colors in relation to the values previously stored in memory for the RGB emission characteristics of the CRT phosphors and the standard white W. Since the luminous intensities of the monochromatic red, green, and blue colors can be adjusted individually by adjusting the screen voltage and drive voltage for each color, analyzer mode makes adjusting the white balance of the CRT much easier.

The sensors of the measuring probe are filtered to have spectral sensitivities $\bar{x}_2\lambda$, $\bar{y}\lambda$ and $\bar{z}\lambda$ which are somewhat related to the CRT's RGB spectral distribution as shown in figure 1. Actually, the spectral distribution of any color generated on the CRT screen will have some area which coincides with the spectral sensitivity of each of the measuring probe's three sensors. For example, if monochromatic red is generated on the CRT, some area of the spectral distribution of the generated red will coincide with the spectral sensitivity of each of the three sensors as indicated by the shaded areas in figure 2. The same principle applies to monochromatic green or monochromatic blue.

To measure each monochromatic color separately, it would seem that some kind of special device would be necessary. In analyzer display mode, the CA-100 provides a solution to this problem based on measurement as follows.

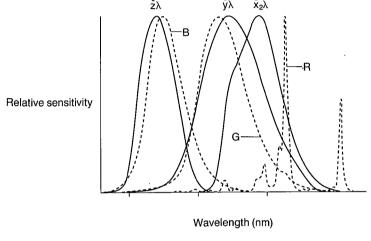


Figure 1: Relation between typical CRT spectral distribution and spectral sensitivities of CA-100 measuring-probe sensors

When monochromatic red is generated on the CRT, the outputs X_{2R} , Y_{R} , and Z_{R} for $\bar{x}_{2}\lambda$, $\bar{y}\lambda$ and $\bar{z}\lambda$ are as indicated by the shaded areas in figure 2. The output from each sensor is then stored in memory and used to adjust the output of each sensor during later measurements of luminous intensity. The output ratio (the portion of sensor output due to red) is different for different sensors and CRTs.

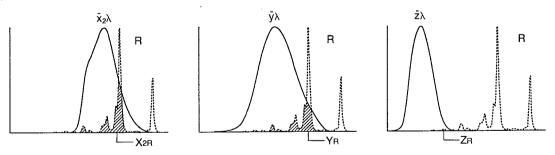


Figure 2: Sensor output when measuring monochromatic red generated on a CRT

The same principle is used to determine the output ratios for green (figure 3) and blue (figure 4) as shown below.

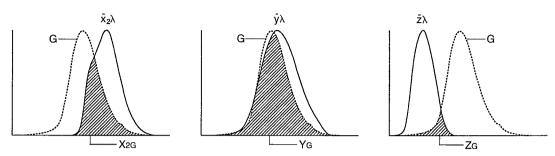


Figure 3: Sensor output when measuring monochromatic green generated on a CRT

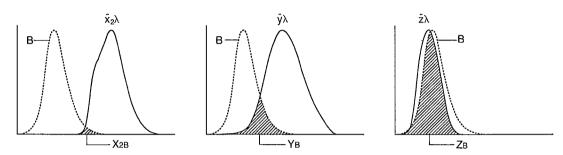



Figure 4: Sensor output when measuring monochromatic blue generated on a CRT

By measuring each monochromatic color separately and determining the appropriate constants for calculations based on the output ratio of each sensor for each color, the luminous quantity of each color can be determined from the total output of each sensor even when all three colors are generated at the same time. When measurements are taken, the luminous intensity for each color is displayed relative to the standard color (W), for which the relative value of each color is 100.

To perform measurements in analyzer mode according to the above procedure, it is necessary to store the RGB emission characteristics of the CRT phosphors and the standard white value in memory before measurements. Also, since the RGB emission characteristics are different for different types of CRTs, the memory channel which is used for measurements should contain the RGB emission characteristics for the type of CRT which is being measured.

CARE AND STORAGE

- If the CA-100 becomes dirty, it may be wiped with a soft, clean, dry cloth. Never use benzene, paint thinner, or other chemicals to clean the CA-100.
- If the diffuser plate of the measuring probe's receptor area becomes dirty, it may be wiped lightly with Cleaning Cloth CA-A21 included as a standard accessory.
- Do not disassemble the CA-100 or attempt to repair it yourself. If repairs are required, contact the nearest Minolta service facility.
- Do not use the CA-100 under conditions which may result in condensation. Be especially careful to protect the CA-100 when transporting it from a cold area to a warm, humid area.
- The storage temperature range for the CA-100 and optional accessories are as follows:




Do not store the CA-100 or any of the optional accessories in areas subject to high temperatures or high humidity. If possible, store the CA-100 and/or the optional accessories at room temperature together with a drying agent such as silica gel.

- Do not store the optional Memory or Analyzer cards in areas subject to static electricity or large amounts of electrical noise. Storage in such areas may result in stored data being damaged.
- When storing the optional Multi-Probe Expansion Board CA-A13 or GP-IB Interface Board CA-A20, they should be
 placed in the protective anti-static bags in which they were shipped.

FUSE REPLACEMENT

The CA-100 is equipped with a fuse to protect it from power surges. If the fuse blows, it should be replaced to (SM 500 [F 0.5A] fuse for 100-120V AC model; T 0.315A/250V fuse for 200-240V AC model) according to the following procedure.


- 1. Set POWER switch to **OFF** and unplug the AC power cord.
- Using a slotted (straight-tip) screwdriver, turn the screw of the fuse holder counterclockwise as shown until it is free of the main body.
- 3. Remove the blown fuse and insert a replacement fuse of the same type and rating.
- 4. Replace fuse holder and use the slotted screwdriver to turn the fuse-holder screw clockwise until snug.
- If the new fuse reeded or if the new fuse blows immediately, unplug the AC power cord and contact the nearest Minolta authorized service facility.

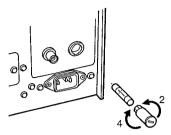

RACK INSTALLATION

The CA-100 can be installed in a rack which conforms to EIA (Electronic Industries Association) standards.

Each side of the main unit has two ISO 4mm screws (total: four) toward the front of the unit. These screws can be removed and their screw holes can be used for mounting the main unit in a rack. Some additional hardware may be required. Refer to the diagram below for the positioning of the holes.

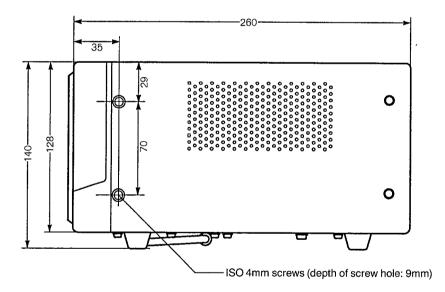


- Be sure that the rack and all associated hardware are sufficiently strong to support the CA-100.
- Be sure that there is sufficient ventilation for the CA-100.


DIMENSIONS

Main Body

(Units: mm)

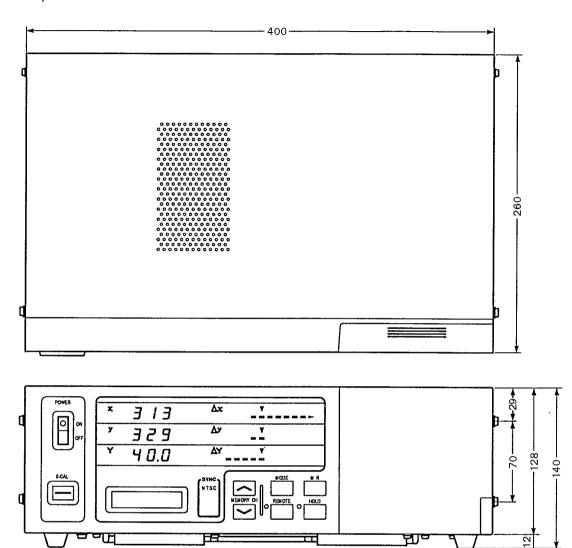

Measuring Probe (Units: mm)

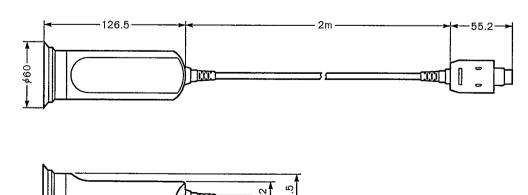

-ISO 5mm socket (depth: 6mm)

Flexible section

2.5

ERROR MESSAGES

	Cause	Solution
CHØ1 P1 E1 []	Display mode: xyY or T△uvY No standard color data has been set in the selected memory channel after shipment.	Perform calibration to a user-selected reference or set standard color data.
	The measuring probe which is being used is different from the measuring probe which was used for calibration to a user-selected reference or setting of standard color data.	Use the presently connected measuring probe to perform calibration to a user-selected reference or set the standard color data, or change the measuring probe to the one that was used when calibration to a user-selected reference or setting of standard color data was performed.
	Display mode: Analyzer (RBG) • There are no RGB emission characteristics of CRT phosphors presently set in the selected memory channel. At the time of shipment no RGB emission characteristics are stored in memory.	Set RGB emission characteristics.
	Measuring probe presently being used is different from the measuring probe used when RGB emission characteristics or standard color data were set.	Use the measuring probe which was used when RGB emission characteristics or standard color data were set, or set RGB emission characteristics or standard color data using the present measuring probe.
	Data stored in the presently selected memory channel was lost.	Perform required procedures to set calibration data for a user-selected reference, standard color data, or RGB emission characteristics again.
	Note: To quickly determine the exact cause of the error, check the serial number of the present probe and that of the probe used when calibration to a user-selected reference or setting of standard color (or setting of RGB emission characteristics of CRT phosphors) was performed and refer to p. 93.	
	Error message ''E2'' will not appear when this error message is shown.	
CH01 P1	Ambient temperature has changed since zero calibration was performed.	Perform zero calibration again.
E2 []	Note: This display will not appear in the liquid crystal display when "E1" is shown.	

Error message	Cause	Solution
E3 CH01 × y Y E3 <u>3</u> 30 000 39.5	Unacceptable calibration data (when performing calibration to a user-selected reference) or standard color data (when inputting standard color data for memory channel 00 using the number keys) was input. Unacceptable data includes the following: $x, y, \text{ or } Y = 0 \\ x + y \ge 1 \\ Y \ge 1000 \text{cd/m}^2 \text{ (292 fL)}$ Other data which is contradictory or which exceeds the processing capability of the CA-100.	Input correct data and press ENTER again.
E4 RANGE x,9 Y E4(%) 0.0 2.0	"0.0%" was entered as the analog display range value.	Use the number keys (0 through 9) and . to set a value between 0.1 and 99%, and then press ENTER again.
E5 CH01	At least one of the values (R, G, B, or W) has not been input.	Input all four values (R, G, B, and W) and then press ENTER .
E5 W *R *G *B	The measured standard color (W) was over the measuring range when 7 was pressed.	Set the standard color (W) within the measuring range, press 7 again, and then press ENTER .
OFFSET ERROR OFFSET ERROR PUSH Ø-CAL KEY	Zero calibration was not performed correctly (all light was not blocked from reaching the receptor area of the measuring probe before zero calibration was performed).	Perform zero calibration again. Be sure that no light reaches the receptor area of the measuring head until zero calibration has been completed.
	Note: When this message appears: - CA-100 will not respond if CAL is pressed Calibration mode will be canceled ID label input mode will be canceled Analog display range setting mode will be canceled Mode for setting RGB emission characteristics will be canceled. Measured data will appear in the displays if light reaches the receptor area of the measuring probe; however, data will not be correct.	
TOO BRIGHT	Some light reached the receptor area of the measuring probe during zero calibration.	Block all light from reaching the receptor area of the probe and press 0-CAL again after "DARKEN PROBE PUSH 0-CAL KEY" appears in the display.

Error message	Cause	Solution
NO SYNC. SIGNAL NO SYNC. SIGNAL	SYNC mode is set to EXT and no external synchronization signal is being input via the EXT (V. SYNC) terminal on the back of the CA-100.	Input an external synchronization signal.
	The frequency of the synchronization signal being input is less than 40Hz.	Set SYNC mode to UNIV.
	Note: When this message appears: - CA-100 will not respond if CAL is pressed CA-100 will not respond if ENTER is pressed while calibration LED is lit CA-100 will not respond if HOLD is pressed.	
OVER OVER	Measured value is beyond the measuring range of the CA-100.	Set a color within the CA-100's measuring range.
	In analyzer mode, the calculated measurement value is greater than 100,000% (over display range).	Set a color within the CA-100's display range.
SET MAIN PROBE SET MAIN PROBE	Measuring probe is not correctly connected to probe connector P1.	Set POWER switch to OFF , connect measuring probe correctly to probe connector P1, and set POWER switch to ON again.
PROBE ERROR	Measuring probe was connected or disconnected while CA-100 was switched on.	Set POWER switch to OFF , reconnect measuring probe, and set POWER switch back to ON .
MEMORY CARD ERROR	Memory card was inserted or removed while CA-100 was switched on.	Set POWER switch to OFF and reinsert card.
ERROR J	A card other than CA-100 optional cards was inserted.	Use only optional cards specifically designed for the CA-100.
	Memory Card CA-A14, Analyzer Card-G CA-A15, or Analyzer Card-R CA-A16 was inserted when using optional Multi- Probe Expansion Board CA-A13 with more than one measuring probe connected to the CA-100.	Set POWER switch to OFF , insert the appropriate card, and set POWER switch back to ON .

Error message	Cause	Solution
DATA ERROR DATA ERROR	Measurement circuit is not operating correctly.	Set POWER switch to OFF and then set it back to ON . If this display reappears, the CA-100 is malfunctioning. Contact the nearest Minolta service facility.
	Note: When this message appears: - CA-100 will not respond if CAL is pressed Calibration mode will be canceled ID label input mode will be canceled Analog display range setting mode will be canceled Mode for setting RGB emission characteristics will be canceled Data in all memory channels (standard color data, calibration data for user-selected reference, ID label, etc.) will be reset to their initial settings (settings at time of shipment).	
MEMORY ERROR MEMORY ERROR	Memory error.	Set POWER switch to OFF and then set it back to ON . If this display reappears, the CA-100 is malfunctioning. Contact the nearest Minolta service facility.

Determining Cause of Error Message "E1"

When error message "E1" appears, check the serial numbers of the present measuring probe and the measuring probes used for calibration to a user-selected reference, setting RGB emission characteristics of CRT phosphors, and setting the standard color data. Then check the results against the table below and on the following page.

To check the serial number of the present measuring probe, press **PROBE**. (When using optional Multi-Probe Expansion Board CA-A13, the presently selected measuring probe connector will also change when **PROBE** is pressed.)

To check the serial numbers of the measuring probes used for calibration to a user-selected reference (or for setting RGB emission characteristics of CRT phosphors when using an optional Analyzer Card) and for setting the standard color data, press **PROBE** while holding **M R** pressed. Two serial numbers will appear in the liquid crystal display: the upper serial number is the serial number of the measuring probe used for performing calibration to a user-selected reference (if xyY or T\(Delta\tuv\)Y display mode is selected) or for setting RGB emission characteristics of CRT phosphors (if analyzer (RBG) display mode is selected); the lower serial number is the serial number of the measuring probe used for setting the standard color data.

Serial numbers of measuring probes for setting data (PROBE pressed while M R held pressed)	xyY or T∆uvY display mode	Analyzer (RBG) display mode
Both numbers "00000000" ØØØØØØØØ ØØØØØØØØ	Cause: Calibration to a user-selected reference and setting of standard color data has not been performed for the selected memory channel since the CA-100 was shipped from the factory. Solution: Perform calibration to a user-selected reference or set standard color data for the selected memory channel.	Cause: Setting of RGB emission characteristics of CRT phosphors or setting of standard color data has not been performed for the selected memory channel since the CA-100 was shipped from the factory. Solution: Set RGB emission characteristics of CRT phosphors or set standard color data for the selected memory channel.
Upper number "00000000"; lower number any value except "0000000" or "99999999" @@@@@@@@ 1679@168		Cause: RGB emission characteristics of CRT phosphors have not been set. Solution: Set RGB emission characteristics of CRT phosphors. If it is desired to set the standard color data to different data than the data set when RGB emission characteristics are set, set the desired standard color data after setting the RGB emission characteristics.

Serial numbers of measuring probes for setting data (PROBE pressed while M R held pressed)	xyY or T∆uvY display mode	Analyzer (RBG) display mode
Upper and lower numbers different 21593001 16790160	Cause: The measuring probe used for performing calibration to a user-selected reference was different from the measuring probe used for setting standard color data. Solution: Set standard color data using the measuring probe with which calibration to a user-selected reference was performed. Alternately, use the presently connected measuring probe to perform calibration to a user-selected reference or to set standard color data.	Cause: The measuring probe used for setting RGB emission characteristics of CRT phosphors was different from the measuring probe used for setting standard color data. Solution: Set standard color data using the measuring probe with which RGB emission characteristics of CRT phosphors were set. Alternately, use the presently connected measuring probe to set RGB emission characteristics of CRT phosphors and to set standard color data.
Upper and lower numbers same 16790160 16790160	Cause: The present measuring probe is different from the measuring probe used for performing calibration to a user-selected reference or for setting standard color data. Solution: Take measurements using the measuring probe with which calibration to a user-selected reference was performed or standard color data were set. Alternately, use the present measuring probe to perform calibration to a user-selected reference or to set standard color data.	Cause: The present measuring probe is different from the measuring probe used for setting RGB emission characteristics of CRT phosphors or for setting standard color data. Solution: Take measurements using the measuring probe with which RGB emission characteristics or standard color data were set. Alternately, use the present measuring probe to set RGB emission characteristics or to set standard color data.
Upper number "00000000" and lower number "99999999" @@@@@@@@@ 99999999	Cause: Data stored in the selected memory channel was destroyed. Correction factors and ID label are set to the values set at the time of shipment. Solution: Perform all operations necessary to set the desired data again.	Cause: Data stored in the selected memory channel was destroyed. ID label set to the value set at the time of shipment. Solution: Perform all operations necessary to set the desired data again

TROUBLESHOOTING GUIDE

If a problem occurs with the CA-100, please check the following points before requesting service. If the problem continues after checking these points and taking the appropriate corrective action, contact the nearest Minolta service facility.

Problem	Checkpoint	Solution
After POWER switch has been set to ON , nothing appears in the liquid crystal display.	Is AC power cord connected properly?	Set POWER switch to OFF and connect AC power cord properly. See p. 20.
	Is fuse inserted?	Insert fuse. See p. 87.
	Is fuse blown?	Replace blown fuse with a new one. See p. 87.
	Is power source correct (AC 100 to 120V, 50 to 60Hz for North America, AC 220 to mode 240V, 50 to 60Hz for Europe)?	Connect AC power cord to the correct power source.
CA-100 does not respond when a key is pressed.	Is CA-100 in remote-control mode (is REMOTE LED lit)?	Press REMOTE to cancel remote- control mode (REMOTE LED will become not lit).
	Can the key be used in the present operation?	Press a key which can be used in the present operation.
Even after zero calibration has been performed, "ZERO CALIBRATION" continues to be shown in the liquid crystal display.		Set POWER switch to OFF and then set it back to ON . If this situation continues even after zero calibration is performed again, the CA-100 is malfunctioning.
Even though no light was allowed to reach the receptor area of the measuring probe when zero calibration was performed, "TOO BRIGHT" appears in the liquid crystal display.		Set POWER switch to OFF and then set it back to ON . If this situation continues even after zero calibration is performed correctly again, the CA-100 is malfunctioning.
When SYNC mode is set to EXT, "NO SYNC SIGNAL" appears in the liquid crystal display.	Is an external synchronization signal source connected properly to the CA-100's EXT (V. SYNC) terminal and is a synchronization signal being input?	Connect the external synchronization signal source properly and input the synchronization signal correctly. See p. 16.
	Does the synchronization signal being input meet the input signal requirements?	Input a synchronization signal which meets the input signal requirements. See p. 16.
	Is the frequency of the synchronization signal being input between 40 and 90Hz?	Set SYNC mode to UNIV. See p. 23.

Problem	Checkpoint	Solution -
When performing calibration to a user-selected reference, the values input before calibration and the values shown in the display after calibration are different.	Is the luminance (Y value) of calibration data low?	When the calibration luminance value is low, the values may become different due to rounding off during internal calculations.
Measured values vary widely.	Is the selected SYNC mode appropriate for the CRT being measured?	Select the appropriate SYNC mode. See p. 23.
	Is the luminance of the CRT low?	When measuring a CRT of low luminance, the x, y repeatability is lower.
	Is receptor area of measuring probe being held firmly in one position against the CRT surface?	Hold the receptor area of measuring probe firmly against the CRT surface and do not move it during measurements.
Displayed measurement values seem incorrect.	Is receptor area of measuring probe dirty?	Clean receptor area of measuring probe with a soft, dry cloth or silicontreated cloth.
	Did ambient temperature change?	Perform zero calibration at present ambient temperature. See p. 27.
	Was calibration to a user-selected reference performed properly?	Perform calibration to a user-selected reference properly. See p. 33.
	Is luminance-unit selector switch set to the desired position?	Set luminance-unit selector switch to the desired position. See p. 22.
Values indicated by analog display do not change.	Is analog display range set properly?	Set analog display range properly. See p. 39.
	Are standard color data set properly?	Set standard color data properly. See p. 30 for setting or changing standard color data. Standard color data are also automatically set when calibration to a user-selected reference is performed (see p. 33) or when RGB emission characteristics of CRT phosphors are set (see p. 36).

Problem	Checkpoint	Solution
When performing data communication via the RS-232C terminal, data output by the CA-100 are not received by the computer, or commands or data from the computer are not received by the CA-100.	Is the cable connecting the CA-100 and the computer connected properly to both units?	Connect cable properly to both the CA-100 and the computer. See p. 50.
·	Are the internal connections of the connecting cable correct?	Check that the internal connections of the connecting cable are the same as those shown on p. 50.
	Are the communication parameters set on the computer the same as those of the CA-100?	Set the communication parameters of the computer to those of the CA-100. See p. 51.
	Is remote-control mode of CA-100 switched off (is REMOTE LED not lit)?	Press REMOTE or input the command "F1" from the computer to switch on the CA-100's remote-control mode.
	Is the optional GP-IB Interface Board CA-A20 installed in the CA-100?	Remove the GP-IB Interface Board from the computer. See p. 58. (While GP-IB Interface Board is installed, data communication via the RS-232C terminal is not possible.)
	Is the computer program correct?	Check operation using the sample program in this manual. See p. 54.
While performing data communication via the RS-232C terminal, even if REMOTE is pressed, remote-control mode is not set (REMOTE LED does not light).	Is the optional GP-IB Interface Board CA-A20 installed in the CA-100?	Remove the GP-IB Interface Board from the CA-100. See p. 58. (While GP-IB Interface Board is installed, data communication is possible only via the GP-IB system.)
The error message "DATA ERROR" or "MEMORY ERROR" appears in the liquid crystal display.		Set POWER switch to OFF and then set it back to ON . If either of these error messages continues to appear, the CA-100 is malfunctioning.

When Using Optional Multi-Probe Expansion Board

Problem	Checkpoint	Solution
Probe connectors P2 through P5 cannot be selected (do not	Is Multi-Probe Expansion Board properly installed?	Install Multi-Probe Expansion Board properly.
appear in the liquid crystal display).	Are measuring probes properly connected to probe connectors P2 through P5?	Connect measuring probes properly to those probe connectors which will be used. Only those probe connectors to which measuring probes are properly connected can be selected.

When Using an Optional Memory Card or Analyzer Card

Problem	Checkpoint	Solution
Card does not function properly.	Is card being used one of the optional cards for the CA-100?	Use only optional Memory or Analyzer Cards specifically designed for the CA-100.
	Is the correct card being used? (Optional Memory Card CA-A14, Analyzer Card-G CA-A15, and Analyzer Card-R CA-A16 are for use when the measuring probe connected to probe connector P1 is the only measuring probe connected to the CA-100; Multi- Probe Memory Card CA-A17, Multi- Probe Analyzer Card-G CA-A18, and Multi-Probe Analyzer Card-R CA-A19 are for use only when Multi-Probe Expansion Board CA-A13 is installed in the CA-100.)	Use the correct card.
	Is the card fully inserted in the proper orientation?	Insert card fully in the proper orientation.

When Using Optional GP-IB Interface Board CA-A20

Problem	Checkpoint	Solution
When performing data communication via the GP-IB terminal, data output by the CA-100 are not received by the controller (computer), or commands or data from the controller (computer) are not received correctly by the CA-100.	Is the cable connecting the CA-100 and the controller (computer) connected properly to both units?	Connect cable properly to both the CA-100 and the controller (computer). See p. 59.
	Is the address properly set?	Set the address properly. See p. 59.
	Is remote-control mode of CA-100 switched off (is REMOTE LED not lit)?	Set REN signal low to designate CA-100 as a listener. When data is output from CA-100 to controller (computer), designate CA-100 as a talker. See p. 60.
	Is GP-IB Interface Board properly installed?	Install GP-IB Interface Board properly. See p. 58.
	Is the computer program correct?	Check operation using the sample program in this manual. See p. 64.
	Is delimiter code properly set?	Set delimiter code properly on CA-100 and controller (computer). See p. 62.
	Is service request properly set?	Set service request properly on CA-100 and controller (computer). See p. 61.
	Are other devices connected to the GP-IB system operating properly?	Reset all devices connected to the GP-IB system.

SPECIFICATIONS

Type: CRT color analyzer

Luminance measuring range: 0.20 to 999cd/m² or 0.06 to 292fL; luminance units selectable via switch on

back panel

Display modes: xyY; T∆uvY; analyzer (RBG) mode (green standard or red standard)*

Synchronization modes: NTSC; PAL; EXT; UNIV.

Display values: Digital: xyY; T△uvY; analyzer (RBG)*

Analog: $\triangle x \triangle y \triangle Y$; R/G, B/G, $\triangle G^*$; $\triangle R$, B/R, G/R*

Memory: 11 channels; 100 channels with optional card*

Accuracy: Y: ±2% ±1 digit

 $xy: \pm 0.002$

(Measurement conditions: standard monitor, luminance 10.0cd/m² or above, D₆₅)

Repeatability: Y: $\pm 0.3\% \pm 1$ digit

xy: $\pm 1\% \pm 1$ digit (0.20cd/m² \leq Y \leq 3.00cd/m²) $\pm 0.3\% \pm 1$ digit (3.00cd/m² \leq Y \leq 999cd/m²)

Measurement rate: NTSC: 10 times/s

PAL: 8 times/s

EXT: 7 times/s (for 60Hz synchronization signal)

UNIV.: 5 times/s

(Measurement conditions: Display mode: xyY, measuring probe connected to

probe connector P1 only, baud rate: 9600)

Other functions: Calibration to user-selected reference; storage of ID name; user-variable analog

display range; analyzer mode*; simultaneous measurements of multiple points*

Data communication: RS-232C interface (baud rate: 300 to 19200bps, set to 9600bps at factory); GP-IB

(IEEE-488)*

Operating temperature range: 0 to 40°C (32 to 104°F); 85% humidity (at 35°C/95°F with no condensation)

Power: AC 100 to 120V, 50/60Hz, 40VA or AC 200 to 240V, 50/60Hz, 40VA

Dimensions: Main unit: $400 \times 140 \times 260$ mm (15-3/4 × 5-1/2 × 10-1/4 in.)

Measuring probe: $\phi 45 \times 127$ mm ($\phi 1-3/4 \times 5$ in.)

Cord length: 2m (6.6 ft.)

Weight: Main unit: 5.5kg (12.1 lb.)

Measuring probe: 250g (8-13/16 oz.)

Standard accessories: Measuring Probe CA-A10 (with 2m/6.6 ft. cord), AC power cord, Measuring Probe

Holder CA-A11, fuse (1), basic operation sheets (5 sheets; can be stored inside

keyboard cover)

Optional accessories: Measuring Probe CA-A10 (with 2m/6.6 ft. cord), Measuring Probe CA-A12 (with

5m/16.4 ft. cord), Multi-Probe Expansion Board CA-A13, GP-IB Interface Board CA-A20, Memory Card CA-A14, Multi-Probe Memory Card CA-A17, Analyzer Card-G CA-A15, Analyzer Card-G CA-A16, Multi-Probe Analyzer Card-G CA-A18,

Multi-Probe Analyzer Card-R CA-A19

Installation conditions: • Indoor use only

• Maximum altitude: 2000m

• Allowable fluctuation of power supply voltage: ±10% of nominal voltage

• Installation category II

• Pollution degree 1

Specifications subject to change without notice

^{*} Function available with optional accessory only

Minolta Co.,Ltd.

Radiometric Instruments Operations

Minolta Corporation Minolta Canada Inc. Minolta GmbH

Minolta France S.A. Minolta U.K. Ltd.

Minolta Austria Ges.m.b.H. Minolta Camera Benelux B.V.

Minolta Schweiz AG Minolta Italia s.r.l Minolta Svenska AB

Minolta Hong Kong Limited

Minolta Singapore (Pte) Ltd. Minolta Co.,Ltd. Seoul Office 3-13, 2-Chome, Azuchi-Machi, Chuo-Ku, Osaka 541-8556, Japan

101 Williams Drive, Ramsey, New Jersey 07446, U.S.A. Phone: 201-818-3517, 1-888-ISD-COLOR FAX: 201-825-4374 369 Britannia Road East Mississauga, Ontario L4Z 2H5, Canada Phone: 905-890-6600 FAX: 905-890-7199

Kurt-Fischer-Strasse 50, 22923 Ahrensburg, Germany Phone: 04102-701 FAX: 04102-70327

365-367, Route de Saint-Germain, 78420 Carrieres-Sur-Seine, France Phone: 01-30866161 FAX: 01-30866280 Precedent Drive, Rooksley Park, Milton Keynes, MK13 8HF, England Phone: 01-908200400 FAX: 01-908618662

Amalienstrasse 59-61,1131 Wien, Austria Phone: 01-87882-222 FAX: 01-87882-180 Postbus 6000, 3600 HA Maarssen, The Netherlands Phone: 030-2470860 FAX: 030-2470861

Riedstrasse 6, 8953 Dietikon, Switzerland Phone: 01-7403727 FAX: 01-7422350 Via Stephenson 37, 20517, Milano, Italy Phone: 02-39011-1 FAX: 02-39011-219

Albygatan 114 P.O.Box 9058 S-17109 Solna, Sweden Phone: 08-627-7650 FAX: 08-627-7685

Room 208, 2/F, Eastern Centre 1065 King's Road, Quarry Bay, Hong Kong, China Phone: 2565-8181 FAX: 2565-5601

10, Teban Gardens Crescent Singapore 608923 Phone: 563-5533 FAX: 561-9879

801, Chung-Jin Bldg, 475-22, BangBae-Dong, Seocho-Ku, Seoul, Korea Phone: 02-523-9726 FAX: 02-523-9729

